

## Package Contents

- SK630 Keyboard
- Carrying Pouch
- Keycap Puller
- Quick Start Guide
- USB Type-C to Type-A Cable



設備名稱：電腦鍵盤	型號（款式）：SK-630-GKLR1-TC
	SK-630-GKLR1-US
單元	限用物質及其化學符號
	鉛 (Pb) 汞 (Hg) 鎘 (Cd) 六價鉻 (Cr <sup>VI</sup> ) 多溴聯苯 (PBB) 多溴二苯醚 (PBDE)
外殼	○ ○ ○ ○ ○ ○
電路板	— ○ ○ ○ ○ ○ ○
連接線	○ ○ ○ ○ ○ ○ ○

備考1. “超出0.1 wt %”及“超出0.01 wt %”係指限用物質之百分比含量超出百分比含量基準值  
備考2. “○”係指該項限用物質之百分比含量未超出百分比含量基準值。  
備考3. “—”係指該項限用物質無檢出項目。

<p><b>Asia Pacific - Cooler Master Technology Inc.</b>  8F, No. 798-1, Zhongxing Rd., Zhongxing Dist., New Taipei City 23586, Taiwan (R.O.C.)  Jinshan Dist., Shanghai City, China  Tel: +886-2-2225-3517</p>	<p><b>China - Cooler Master China</b>  7th Floor, Building C, Hongqiao R&amp;F Center, No. 7, 958 Lane, Shenhong Road, Minhang District, Shanghai City 200511, China  +86-21-51872177</p>
---	---

<p><b>North America - Cooler Master North America</b>  2928 East Imperial Highway, Ste 110, Brea, CA 92821, USA  Tel: +1-888-624-5099</p>	<p><b>Europe - Cooler Master Europe B.V.</b>  Lodewijkstraat 16, 5652AK Eindhoven, The Netherlands  Tel: +31-(0)40-702-0930</p>
---	---

<p>© 2018 Cooler Master Technology Inc. All Rights Reserved.  All trademarks are registered to their respective owners.  Ver 1.0: 2018/09 S12002110-GP</p>	
--	--



<p>AR</p> <p>وضع الإقرئى = FN + ESC</p> <p>إعادة ضبط الكل للوضع الإقرئى = FN + E</p> <p>إعادة ضبط الحساب للوضع الإقرئى = FN + R</p> <p>اختيار لون كمنلة 9 ألوان ومؤثرات (9-0) درجت اللون الأحمر = FN + F1</p> <p>(9-0) درجت اللون الأخضر = FN + F2</p> <p>(9-0) درجت اللون الأصفر = FN + F3</p> <p>(9-0) درجت اللون الأزرق = FN + F4</p> <p>وضع بوردة كمنلة مؤثرات إعادة إلامية = FN + F5</p> <p>مؤثرات إعادة إلامية = FN + F6</p> <p>مؤثرات إعادة خلفه = FN + F7</p> <p>وضع الإضاءة الخريبيى = FN + F8</p> <p>قل الوندوز / نقل المفتوح بكتامل = FN + F9</p> <p>تسجيل إسماء خلفه = FN + F10</p> <p>Macro تسجيل = FN + F11</p> <p>Macro مسح = FN + F12</p> <p>حقة Macro واحدة = FN + PRT SC</p> <p>Macro إلامية = FN + SCR LK</p> <p>Macro تخزين = FN + PAUSE</p> <p>مفلف شخصى رقم 1 = FN + F1</p> <p>مفلف شخصى رقم 2 = FN + 2</p> <p>مفلف شخصى رقم 3 = FN + 3</p> <p>مفلف شخصى رقم 4 = FN + 4</p> <p>تسجيل / إيقاف = FN + INS</p> <p>الأغنية التالية = FN + HOME</p> <p>توقف = FN + DEL</p> <p>الأغنية السابقة = FN + END</p> <p>رفع الصوت = FN + PGUP</p> <p>خفض الصوت = FN + PUDN</p>	<p>CHS</p> <p>ESC = 默认配置文件</p> <p>FN + E = 全部重置为默认值</p> <p>FN + R = 将配置文件重置为默认值</p> <p>FN + F1 = 快速挑选/循环 9 种颜色和模式</p> <p>FN + F2 (Rot +) = Farbstufen rot (0-9)</p> <p>FN + F3 = 红色水平 (0-9)</p> <p>FN + F4 = 蓝色水平 (0-9)</p> <p>FN + F5 = 循环 LED 照明模式</p> <p>FN + F6 = 前置照明效果</p> <p>FN + F7 = 后置照明效果</p> <p>FN + F8 = 演示模式照明</p> <p>FN + F9 = Windows 锁定 / 全键盘锁定</p> <p>FN + F10 = 录制 LED 背光</p> <p>FN + F11 = 录制宏</p> <p>FN + F12 = 删除宏</p> <p>FN + PRT SC = 单键环宏</p> <p>FN + SCR LK = 无限宏循环</p> <p>FN + PAUSE = 重复宏</p> <p>FN + F1 = 1 个配置文件 1</p> <p>FN + 2 = 配置文件 2</p> <p>FN + 3 = 配置文件 3</p> <p>FN + 4 = 配置文件 4</p> <p>FN + INS = 播放/暂停</p> <p>FN + HOME = 下一个曲目</p> <p>FN + DEL = 停止</p> <p>FN + END = 下一个曲目</p> <p>FN + PGUP = 音量升高</p> <p>FN + PGDN = 音量降低</p> <p>FN + 方向上 / 下：增加/减小 灯光流动速度</p> <p>FN + 向左/向右箭头键：切换照明效果方向</p>
---	--

<p>CHT</p> <p>FN + ESC = 预设设定键</p> <p>FN + E = 全部恢復为预设值</p> <p>FN + R = 將設定恢復为预设值</p> <p>FN + F1 = 快速選擇/循環切換 9 種顏色及模式</p> <p>FN + F2 (Rot +) = Farbstufen rot (0-9)</p> <p>FN + F3 = 紅色色階 (0-9)</p> <p>FN + F4 (Blue +) = Farbstufen blau (0-9)</p> <p>FN + F5 = 循環切換 LED 照明模式</p> <p>FN + F6 = 前置照明效果</p> <p>FN + F7 = 後方照明效果</p> <p>FN + F8 = 照明模式展示</p> <p>FN + F9 = Windows 鎖定 / 全鍵盤鎖定</p> <p>FN + F10 = 錄製 LED 背光</p> <p>FN + F11 = 錄製宏</p> <p>FN + F12 = 刪除宏</p> <p>FN + PRT SC = 單鍵循環巨集</p> <p>FN + SCR LK = 無限宏循環</p> <p>FN + PAUSE = 重複巨集</p> <p>FN + 1 = 1 個設定檔 1</p> <p>FN + 2 = 設定檔 2</p> <p>FN + 3 = 設定檔 3</p> <p>FN + 4 = 設定檔 4</p> <p>FN + INS = 播放/暫停</p> <p>FN + HOME = 下一個曲目</p> <p>FN + DEL = 停止</p> <p>FN + END = 上一首</p> <p>FN + PGUP = 音量升高</p> <p>FN + PGDN = 音量降低</p> <p>FN + 方向上 / 下：增加/减小 燈光流動速度</p> <p>FN + 向左/向右箭头键：切换照明效果方向</p>	<p>DE</p> <p>FN + ESC = Standardprofil</p> <p>FN + E = alles auf Standard-einstellungen zurücksetzen</p> <p>FN + R = Profile auf Standard-einstellungen zurücksetzen</p> <p>FN + F1 = zufällige Auswahl aus 9 Profilen</p> <p>FN + F2 (Rot +) = Farbstufen rot (0-9)</p> <p>FN + F3 (Green +) = Farbstufen grün (0-9)</p> <p>FN + F4 (Blue +) = Farbstufen blau (0-9)</p> <p>FN + F5 = LED Modus</p> <p>FN + F6 = Beleuchtungseffekt vorne</p> <p>FN + F7 = Beleuchtungseffekt hinten</p> <p>FN + F8 = Beleuchtungsdemomodus</p> <p>FN + F9 = Windows-Sperre / vollständige Tastatursperre</p> <p>FN + F10 = LED Beleuchtung aufzeichnen</p> <p>FN + F11 = Macro aufzeichnen</p> <p>FN + F12 = Macro löschen</p> <p>FN + PRT SC = einfache Macro-Schleife</p> <p>FN + SCR LK = unendliche Macro Schleife</p> <p>FN + PAUSE = Macro wiederholen</p> <p>FN + 1 = zu Profil 1 wechseln</p> <p>FN + 2 = zu Profi 2 wechseln</p> <p>FN + 3 = zu Profil 3 wechseln</p> <p>FN + 4 = zu Profi 4 wechseln</p> <p>FN + INS = Abspielen/Pause</p> <p>FN + HOME = Nächster Titel</p> <p>FN + DEL = Stop</p> <p>FN + END = Vorheriger Titel</p> <p>FN + BILD OBEN = Lautstärke+</p> <p>FN + BILD UNTEN = Lautstärke-</p> <p>FN + obere/untere Pfeiltaste: Schnelligkeit des Lichteffekts erhöhen/verringern</p> <p>FN + linke/rechte Pfeiltaste: Licht Effekt Richtungswechsel</p>
--	---

<p>ES</p> <p>FN + ESC = Perfil predeterminado</p> <p>FN + E = Restablecer todo a los valores predeterminados</p> <p>FN + R = Restablecer Perfil a los valores predeterminados</p> <p>FN + F1 = Selección rápida / ciclo 9 colores y modos</p> <p>FN + F2 (Rouge +) = Niveles Color Rojo (0-9)</p> <p>FN + F3 (Green +) = Niveles Color Verde (0-9)</p> <p>FN + F4 (Bleu+) = Niveles Color Azul (0-9)</p> <p>FN + F5 = Modo Iluminación LED</p> <p>FN + F6 = Efecto frontal de iluminación</p> <p>FN + F7 = Efecto trasero de iluminación</p> <p>FN + F8 = Modo de demostración de iluminación</p> <p>FN + F9 = Bloqueo de Windows / Bloqueo total del teclado</p> <p>FN + F10 = Grabación Retroiluminación LED</p> <p>FN + F11 = Grabar Macro</p> <p>FN + F12 = Borrar Macro</p> <p>FN + PRT SC = Única Macro Loop</p> <p>FN + SCR LK = Infinito Macro Loop</p> <p>FN + PAUSE = Repetir Macro</p> <p>FN + 1 = Perfil 1</p> <p>FN + 2 = Perfil 2</p> <p>FN + 3 = Perfil 3</p> <p>FN + 4 = Perfil 4</p> <p>FN + INS = Play/Pausa</p> <p>FN + HOME = Siguiente pista</p> <p>FN + DEL = Stop</p> <p>FN + END = Subir Volumen</p> <p>FN + Page Up = Subir Volumen</p> <p>FN + Page Down = Bajar Volumen</p> <p>FN + Tecla de dirección arriba / abajo: acelerar / ralentizar los efectos de iluminación LED</p> <p>FN + flecha izquierda / Derecha: Cambiar la dirección del efecto de iluminación</p>	<p>FR</p> <p>FN + ESC = Profil par défaut</p> <p>FN + E = Remettre tous les réglages par défaut</p> <p>FN + R = Reinitialiser le profil par défaut</p> <p>FN + F1 = Sélection rapide / Cycle 9 couleurs et modes</p> <p>FN + F2 (Rouge+) = Niveaux de couleur rouge (0-9)</p> <p>FN + F3 (Vert+) = Niveaux de couleur verte (0-9)</p> <p>FN + F4 (Bleu+) = Niveles Color Azul (0-9)</p> <p>FN + F5 = Mode d'éclairage LED</p> <p>FN + F6 = EfeK Cahaya Latar Depan</p> <p>FN + F7 = EfeK Cahaya Latar Belakang</p> <p>FN + F8 = Mode Demo Pencapaian</p> <p>FN + F9 = Kuncil Windows / Kunci Keyboard penuh</p> <p>FN + F10 = Rekam LED Latar Belakang</p> <p>FN + F11 = Rekam Makro</p> <p>FN + F12 = Hapus Makro</p> <p>FN + PRT SC = Boucle de Macro simple</p> <p>FN + SCR LK = Boucle de Macro infinie</p> <p>FN + PAUSE = Répétition de la Macro</p> <p>FN + 1 = Profil 1</p> <p>FN + 2 = Profil 2</p> <p>FN + 3 = Profil 3</p> <p>FN + 4 = Profil 4</p> <p>FN + INS = Mulai / Pause</p> <p>FN + HOME = Lagu Berikutnya</p> <p>FN + DEL = Berhenti</p> <p>FN + PGUP = Volume Naik</p> <p>FN + PGDN = Volume Turun</p> <p>FN + Panah Atas / Bawah = Percepat / Perlamat Efek Cahaya LED</p> <p>FN + Panah Kiri/Kanan = Mengganti Arah Cahaya LED</p>
---	---

<p>IT</p> <p>FN + ESC = Profilo di default</p> <p>FN + E = Ripristina tutto al default</p> <p>FN + R = Ripristina profilo al default</p> <p>FN + F1 = Presa rapida/Ciclo a 9 Colori e modalità</p> <p>FN + F2 (Rosso +) = Livelli colore Rosso (0-9)</p> <p>FN + F3 (Verde +) = Livelli colore Verde (0-9)</p> <p>FN + F4 (Blue +) = Livelli colore Blue (0-9)</p> <p>FN + F5 = Modalità illuminazione a LED</p> <p>FN + F6 = Effeto anteriore illuminazione</p> <p>FN + F7 = Effeto posteriore illuminazione</p> <p>FN + F8 = Modalità demo illuminazione</p> <p>FN + F9 = Blocco finestra / Blocco tastiera completo</p> <p>FN + F10 = Registra retroilluminazione LED</p> <p>FN + F11 = Registra Makro</p> <p>FN + F12 = Cancella Macro</p> <p>FN + PRT SC = Singolo Macro Loop</p> <p>FN + SCR LK = Perputaran Makro Tanpa Batas</p> <p>FN + PAUSE = Pengulangan Makro</p> <p>FN + 1 = Passare al Profilo 1</p> <p>FN + 2 = Passare al Profilo 2</p> <p>FN + 3 = Passare al Profilo 3</p> <p>FN + 4 = Passare al Profilo 4</p> <p>FN + INS = Play/Pausa</p> <p>FN + HOME = Traccia Successiva</p> <p>FN + DEL = Stop</p> <p>FN + END = Traccia precedente</p> <p>FN + Page Up = Volume Su</p> <p>FN + Page Down = Volume Giù</p> <p>FN + Tasti freccia verso il basso / verso l'alto: accelerare / rallentare gli effetti di illuminazione a LED</p> <p>FN + Panah Atas / Bawah = Percepat / Perlamat Efek Cahaya LED</p> <p>FN + Tasti Freccia a Sinistra / Freccia a Destra: Cambiare effetto d'illuminazione</p>	<p>JP</p> <p>FN + ESC = 既定のプロファイル</p> <p>FN + E = すべて初期値に戻す</p> <p>FN + R = プロファイルを初期値に戻す</p> <p>FN + F1 = 9 色の色モードを簡単選択/循環</p> <p>FN + F2 (Rosso +) = Livelli colore Rosso (0-9)</p> <p>FN + F3 (Verde +) = Livelli colore Verde (0-9)</p> <p>FN + F4 (Blue +) = Livelli colore Blue (0-9)</p> <p>FN + F5 = LED照明モードの循環</p> <p>FN + F6 = フロントの照明効果</p> <p>FN + F7 = リアの照明効果</p> <p>FN + F8 = 照明予モード</p> <p>FN + F9 = Windowsロック/フルキーボードロック</p> <p>FN + F10 = LEDバックライトを記録</p> <p>FN + F11 = マクロを記録</p> <p>FN + F12 = マクロを削除</p> <p>FN + PRT SC = マクロのシングルループ</p> <p>FN + SCR LK = マクロの無限ループ</p> <p>FN + PAUSE = マクロの繰り返し</p> <p>FN + 1 = プロファイル1</p> <p>FN + 2 = プロファイル2</p> <p>FN + 3 = プロファイル3</p> <p>FN + 4 = プロファイル4</p> <p>FN + INS = 再生/一時停止</p> <p>FN + DEL = Stop</p> <p>FN + END = 音量を下げる</p> <p>FN + Page Up = 音量を上げる</p> <p>FN + Page Down = 音量を下げる</p> <p>FN + tecla da seta para cima/ baixo: acelera/desacelera os efeitos da iluminação a LED</p> <p>FN + 向き矢印/ 向き矢印キー: LED照明効果の速度を上げる/下げる</p> <p>FN + 向き矢印/ 向き矢印キー: 照明効果の方向を切り替える</p>
---	--

<p>PT</p> <p>FN + ESC = Perfil Standart</p> <p>FN + E = Redefine tudo para o defeito</p> <p>FN + R = Redefine o perfil para o defeito</p> <p>FN + F1 = Pick Rápido / Ciclo 9 / Cores e Modos</p> <p>FN + F2 (Vermelho +) = Níveis da Cor Vermelha (0-9)</p> <p>FN + F3 (Verde+) = Níveis da Cor Verde (0-9)</p> <p>FN + F4 (Azul +) = Níveis da Cor Azul (0-9)</p> <p>FN + F5 = Modos de Iluminação LED</p> <p>FN + F6 = Efeito de iluminação frontal</p> <p>FN + F7 = Efeito de iluminação traseira</p> <p>FN + F8 = Modo de demonstração de iluminação</p> <p>FN + F9 = Bloqueio do Windows / Bloqueio total do teclado</p> <p>FN + F10 = Grava a retro-iluminação LED</p> <p>FN + F11 = Grava Macro</p> <p>FN + F12 = Elimina Macro</p> <p>FN + PRT SC = Macro Loop singular</p> <p>FN + SCR LK = Macro Loop Infinita</p> <p>FN + PAUSE = Repetição da Macro</p> <p>FN + 1 = Muda para o perfil 1</p> <p>FN + 2 = Muda para o perfil 2</p> <p>FN + 3 = Muda para o perfil 2</p> <p>FN + 4 = Muda para o perfil 4</p> <p>FN + INS = Play/Pausa</p> <p>FN + HOME = Próxima faixa</p> <p>FN + DEL = Parar</p> <p>FN + END = Faixa anterior</p> <p>FN + Page Up = Aumento do Volume</p> <p>FN + Page Down = Baixo o Volume</p> <p>FN + tecla da seta para cima/ baixo: acelera/desacelera os efeitos da iluminação a LED</p> <p>FN + tecla para a direita/esquerda: Teclas: Muda a direção dos efeitos luminosos</p>	<p>RU</p> <p>FN + ESC = профиль по умолчанию</p> <p>FN + E = сбросить все</p> <p>FN + R = сброс настроек профиля к настройкам по умолчанию</p> <p>FN + F1 = Быстрый выбор/Цикл из 9 цветов и режимов</p> <p>FN + F2 (красный +) = уровни красного цвета (0-9)</p> <p>FN + F3 (зеленый +) = уровни зеленого цвета (0-9)</p> <p>FN + F4 (синий +) = уровни синего цвета (0-9)</p> <p>FN + F5 = Режим светодиодной подсветки</p> <p>FN + F6 = Эффект передней подсветки</p> <p>FN + F7 = Эффект задней подсветки</p> <p>FN + F8 = Режим демонстрации подсветки</p> <p>FN + F9 = Блокировка клавиши Windows / блокировка всех клавиш</p> <p>FN + F10 = запись LED подсветки</p> <p>FN + F11 = запись макроса</p> <p>FN + F12 = удалить макрос</p> <p>FN + PRT SC = единственный цикл макроса</p> <p>FN + SCR LK = бесконечный цикл макроса</p> <p>FN + PAUSE = повтор макроса</p> <p>FN + 1 = переключение на профиль 1</p> <p>FN + 2 = переключение на профиль 2</p> <p>FN + 3 = переключение на профиль 2</p> <p>FN + 4 = переключение на профиль 4</p> <p>FN + INS = Воспроизведение/Пауза</p> <p>FN + HOME = Следующий трек</p> <p>FN + DEL = Стоп</p> <p>FN + END = Предыдущий трек</p> <p>FN + Page Up = Увеличение громкости</p> <p>FN + Page Down = Уменьшение громкости</p> <p>FN + PRT SC = Tek Makro Döngüsü</p> <p>FN + SCR LK = Sonsuz Makro Döngüsü</p> <p>FN + PAUSE = Makro Tekrar</p> <p>FN + 1 = Profil 1</p> <p>FN + 2 = Profil 2</p> <p>FN + 3 = Profil 3</p> <p>FN + 4 = Profil 4</p> <p>FN + Page Up = Ses Arttır</p> <p>FN + Page Down = Ses Azalt</p> <p>FN + INS = Oynat / durdur</p> <p>FN + Del = Durdurmak</p> <p>FN + HOME = Sonraki Parça</p> <p>FN + END = Önceki Parça</p>
---	--

<p>TR</p> <p>FN+ESC = Standart profil</p> <p>FN + E = Fabrika Ayarlarına Dön</p> <p>FN + R = Profil Başlangıç Ayarlarına Dön</p> <p>FN+F5 = Döngü LED Aydınlatma Modu</p> <p>FN+F6 = Aydınlatma ön plani efekti</p> <p>FN+F7 = Aydınlatma arka plan etkisi</p> <p>FN+F8 = Aydınlatma modu</p> <p>FN+F9 = Windows klidi / Bütün klavye klidi</p> <p>FN+F10 = Makro Aydınlatma Kaydet</p> <p>FN+F11 = Makro Kaydet</p> <p>FN+F12 = Makro Sil</p>	<p>EN</p> <p>FN + ESC = Default Profile</p> <p>FN + E = Reset all to default</p> <p>FN + R = Reset Profile to Default</p> <p>FN + F1 = Quick Pick/Cycle 9 Colors and Modes</p> <p>FN + F2 = Red Color Levels (0-9)</p> <p>FN + F3 = Green Color Levels (0-9)</p> <p>FN + F4 = Blue Color Levels (0-9)</p> <p>FN + F1 = Profile 1</p> <p>FN + 2 = Profile 2</p> <p>FN + 3 = Profile 3</p> <p>FN + 4 = Profile 4</p> <p>FN + Up / Down Arrow keys: Speed up / Slow Down LED Lighting Effect</p> <p>FN + Left / Right Arrow Keys: Switch Lighting Effect Direction</p>
--	---

### Cooler Master Products

This document describes the warranty terms for all Cooler Master peripheral products

### WHO THE WARRANTY PROTECTS:

This Warranty is valid to the original purchaser only.

### WHAT THE WARRANTY PROTECTS:

This warranty is valid only for the Cooler Master Products distributed by authorized dealers). Please contact Cooler Master for warranty information, services and questions: <http://account.coolermaster.com>

### WHAT IS AND IS NOT COVERED

It is important to note that our warranty is not an unconditional guarantee for the duration of the Program. Any replaced parts become the property of Cooler Master. The Program does not apply to the software component of a product or a product which has been damaged due to accident, misuse, abuse, improper installation, usage not in accordance with product specifications and instructions, natural or personal disaster, or unauthorized alterations, repairs or modifications. The Program does also not cover any events such as below:

- Any damages unrelated to manufacturing defects.
- Any unstable environment or use of the product in Cooler Master Opinion.
- Any product which has been modified without official permission from Cooler Master, or on which the serial number or warranty sticker has been defaced, modified, or removed.
- Damage, deterioration or malfunction resulting from:
  - Accident, abuse, misuse, neglect, fire, water, lightning, or other acts of nature, commercial or industrial use, unauthorized product modification or failure to follow instructions included with the product.
  - Third party products using Cooler Master Components will not be covered by warranty. See your vendor or the manufacturer for information about servicing.
  - Repair or attempted repair by anyone not authorized by Cooler Master, Inc.
  - Any shipment damages (claims must be made with the carrier).
  - Unauthorized repairs to a Cooler Master product will void the warranty offered by the Program. Cooler Master reserves the right to refuse to service any product which has been altered, modified or repaired by non-Cooler Master Service personnel.
  - Cooler Master does not warrant that this product will meet your requirements. It is your responsibility to determine the suitability of this product for your purpose.
  - Removal or installation charges.
  - You are responsible for the cost of shipping the product to Cooler Master. Cooler Master pays the cost of returning a product to You (applies only if product is directly purchased from Cooler Master).
  - Cooler Master reserves the right to replace the product with a service product at their sole discretion at any time.
  - Product malfunction or damage resulting from liquids or moisture.
  - All accessories that malfunction due to physical damage such as: USB cables, extension cables, adapter cables, adapters, power cords, screws, retention brackets, ear cups, and all other similar accessories.

### LIMITATION OF IMPLIED WARRANTIES:

THERE ARE NO WARRANTIES, EXPRESS OR IMPLIED, WHICH EXTEND BEYOND THE DESCRIPTION CONTAINED HEREIN INCLUDING THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

For the most updated information please visit our official website: [www.coolermaster.com](http://www.coolermaster.com)  
Cooler Master Support: <https://account.coolermaster.com>

COOLER MASTER SHALL NOT BE LIABLE FOR:

- DAMAGE TO OTHER PROPERTY CAUSED BY ANY DEFECT IN THE PRODUCT, DAMAGES BASED UPON INCONVENIENCE, LOSS OF USE OF THE PRODUCT, LOSS OF TIME, LOSS OF PROFITS, LOSS OF BUSINESS OPPORTUNITY, LOSS OF GOODWILL, INTERFERENCE WITH BUSINESS RELATIONSHIPS OR OTHER COMMERCIAL LOSS, EVEN IF ADVISED OF THEIR POSSIBILITY OF SUCH DAMAGES.
- ANY OTHER DAMAGES, WHETHER INCIDENTAL, CONSEQUENTIAL OR OTHERWISE
- ANY CLAIM AGAINST THE CUSTOMER BY ANY OTHER PARTY

WARRANTY INFORMATION:
If the product is found with reasonable defect within the period of (refer to Table A.) starting on the first day of purchase (with proof of invoice), this is what you must do, to claim warranty.

PROCEDURES:
1. Consumers should return to the shop where he/she has bought the goods. After confirming with the shop with a valid invoice, they may approach the distributor for RMA claim.
2. After confirmed by the distributor that the goods was damaged due to natural causes, replacement and repair will be done by distributor (including brand new or refurbished goods)
3. All faulty goods must return to the distributor, expenses for returning the faulty goods will be covered by the consumer, and distributor will cover the cost involved in the transporting of parts or repaired goods to the consumer.

Regarding all the expenses incurred in making the claim, and this is how you would claim:
1. Within the valid warranty date, starting from the first day of issuing invoice, Retail shops will assist in confirmation with distributor for the consumer for the following.
A. If the damage was caused by the consumer, then the consumer should cover all expenses in fixing the product, if the product still can't be fixed, we would suggest consumer in buying a brand new product.
B. Product defect caused under natural use, expenses will be covered by the distributor.
2. Faulty products with expired warranty dates, we would suggest consumer to purchase a new products, without undergoing for repairs.

Table A:
Cooler Master Products
Please check your user manual for the exact warranty period terms for products that are not shown below. For more warranty information, please visit our official website: <http://www.coolermaster.com/service/warranty.html>

Product Name	Warranty Term
SK630	2 years

FOR AUSTRALIA ONLY:
Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. (Cooler Master Technology Inc., 8F, No. 798-1, Zhongxing Rd., Zhongxing Dist., New Taipei City 23586, Taiwan (R.O.C.). Telephone: +886-2-2225-3517 (standard international call charges apply)

### EXCLUSION OF DAMAGES

COOLER MASTER'S LIABILITY IS LIMITED TO THE COST OF REPAIR OR REPLACEMENT OF THE PRODUCT. COOLER MASTER SHALL NOT BE LIABLE FOR:

- DAMAGE TO OTHER PROPERTY CAUSED BY ANY DEFECT IN THE PRODUCT, DAMAGES BASED UPON INCONVENIENCE, LOSS OF USE OF THE PRODUCT, LOSS OF TIME, LOSS OF PROFITS, LOSS OF BUSINESS OPPORTUNITY, LOSS OF GOODWILL, INTERFERENCE WITH BUSINESS RELATIONSHIPS OR OTHER COMMERCIAL LOSS, EVEN IF ADVISED OF THEIR POSSIBILITY OF SUCH DAMAGES.
- ANY OTHER DAMAGES, WHETHER INCIDENTAL, CONSEQUENTIAL OR OTHERWISE
- ANY CLAIM AGAINST THE CUSTOMER BY ANY OTHER PARTY

### WARRANTY INFORMATION:

If the product is found with reasonable defect within the period of (refer to Table A.) starting on the first day of purchase (with proof of invoice), this is what you must do, to claim warranty.

### PROCEDURES:

1. Consumers should return to the shop where he/she has bought the goods. After confirming with the shop with a valid invoice, they may approach the distributor for RMA claim.
2. After confirmed by the distributor that the goods was damaged due to natural causes, replacement and repair will be done by distributor (including brand new or refurbished goods)
3. All faulty goods must return to the distributor, expenses for returning the faulty goods will be covered by the consumer, and distributor will cover the cost involved in the transporting of parts or repaired goods to the consumer.

Regarding all the expenses incurred in making the claim, and this is how you would claim:

1. Within the valid warranty date, starting from the first day of issuing invoice, Retail shops will assist in confirmation with distributor for the consumer for the following.
A. If the damage was caused by the consumer, then the consumer should cover all expenses in fixing the product, if the product still can't be fixed, we would suggest consumer in buying a brand new product.
B. Product defect caused under natural use, expenses will be covered by the distributor.
2. Faulty products with expired warranty dates, we would suggest consumer to purchase a new products, without undergoing for repairs.

Table A:
Cooler Master Products
Please check your user manual for the exact warranty period terms for products that are not shown below. For more warranty information, please visit our official website: <http://www.coolermaster.com/service/warranty.html>

Product Name	Warranty Term
SK630	2 years

FOR AUSTRALIA ONLY:
Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. (Cooler Master Technology Inc., 8F, No. 798-1, Zhongxing Rd., Zhongxing Dist., New Taipei City 23586, Taiwan (R.O.C.). Telephone: +886-2-2225-3517 (standard international call charges apply)



COOLER MASTER SHALL NOT BE LIABLE FOR:

- DAMAGE TO OTHER PROPERTY CAUSED BY ANY DEFECT IN THE PRODUCT, DAMAGES BASED UPON INCONVENIENCE, LOSS OF USE OF THE PRODUCT, LOSS OF TIME, LOSS OF PROFITS, LOSS OF BUSINESS OPPORTUNITY, LOSS OF GOODWILL, INTERFERENCE WITH BUSINESS RELATIONSHIPS OR OTHER COMMERCIAL LOSS, EVEN IF ADVISED OF THEIR POSSIBILITY OF SUCH DAMAGES.
- ANY OTHER DAMAGES, WHETHER INCIDENTAL, CONSEQUENTIAL OR OTHERWISE
- ANY CLAIM AGAINST THE CUSTOMER BY ANY OTHER PARTY

### WARRANTY INFORMATION:

If the product is found with reasonable defect within the period of (refer to Table A.) starting on the first day of purchase (with proof of invoice), this is what you must do, to claim warranty.

### PROCEDURES:

1. Consumers should return to the shop where he/she has bought the goods. After confirming with the shop with a valid invoice, they may approach the distributor for RMA claim.
2. After confirmed by the distributor that the goods was damaged due to natural causes, replacement and repair will be done by distributor (including brand new or refurbished goods)
3. All faulty goods must return to the distributor, expenses for returning the faulty goods will be covered by the consumer, and distributor will cover the cost involved in the transporting of parts or repaired goods to the consumer.

Regarding all the expenses incurred in making the claim, and this is how you would claim:
1. Within the valid warranty date, starting from the first day of issuing invoice, Retail shops will assist in confirmation with distributor for the consumer for the following.
A. If the damage was caused by the consumer, then the consumer should cover all expenses in fixing the product, if the product still can't be fixed, we would suggest consumer in buying a brand new product.
B. Product defect caused under natural use, expenses will be covered by the distributor.
2. Faulty products with expired warranty dates, we would suggest consumer to purchase a new products, without undergoing for repairs.

Table A:
Cooler Master Products
Please check your user manual for the exact warranty period terms for products that are not shown below. For more warranty information, please visit our official website: <http://www.coolermaster.com/service/warranty.html>

Product Name	Warranty Term
SK630	2 years

FOR AUSTRALIA ONLY:
Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. (Cooler Master Technology Inc., 8F, No. 798-1, Zhongxing Rd., Zhongxing Dist., New Taipei City 23586, Taiwan (R.O.C.). Telephone: +886-2-2225-3517 (standard international call charges apply)

WARRANTY INFORMATION:
If the product is found with reasonable defect within the period of (refer to Table A.) starting on the first day of purchase (with proof of invoice), this is what you must do, to claim warranty.

PROCEDURES:
1. Consumers should return to the shop where he/she has bought the goods. After confirming with the shop with a valid invoice, they may approach the distributor for RMA claim.
2. After confirmed by the distributor that the goods was damaged due to natural causes, replacement and repair will be done by distributor (including brand new or refurbished goods)
3. All faulty goods must return to the distributor, expenses for returning the faulty goods will be covered by the consumer, and distributor will cover the cost involved in the transporting of parts or repaired goods to the consumer.

Regarding all the expenses incurred in making the claim, and this is how you would claim:
1. Within the valid warranty date, starting from the first day of issuing invoice, Retail shops will assist in confirmation with distributor for the consumer for the following.
A. If the damage was caused by the consumer, then the consumer should cover all expenses in fixing the product, if the product still can't be fixed, we would suggest consumer in buying a brand new product.
B. Product defect caused under natural use, expenses will be covered by the distributor.
2. Faulty products with expired warranty dates, we would suggest consumer to purchase a new products, without undergoing for repairs.

Table A:
Cooler Master Products
Please check your user manual for the exact warranty period terms for products that are not shown below. For more warranty information, please visit our official website: <http://www.coolermaster.com/service/warranty.html>