


DEVASTATOR 3

RGB



GAMING KEYBOARD AND MOUSE COMBO
WITH 6-ZONE RGB ILLUMINATION
AND DEDICATED MEDIA KEYS

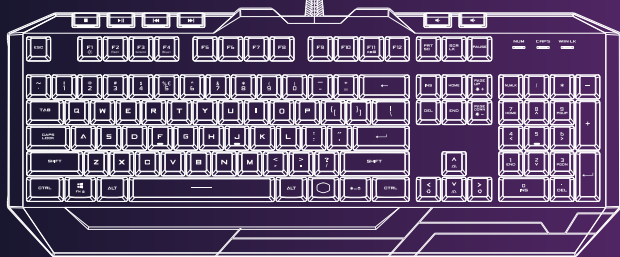

DEVASTATE
THE COMPETITION



Make It Yours.

EN

KEYBOARD:



FN + E = Reset all to Default
(Press and Hold for 5 seconds to Reset to Default)



FN + F1 = Quick Pick/Cycle 8 Colors
FN + F2 = Red Color Levels (0-5)
FN + F3 = Green Color Levels (0-5)
FN + F4 = Blue Color Levels (0-5)



FN + F11 = Full Key Lock



FN + Win = Windows Lock



FN + PgUp / PgDn = Adjust LED Brightness



FN + LED = Turn On/Off Backlight



LED = Cycle LED Lighting Mode



FN + Up / Down Arrow Keys =
Speed Up / Slow Down LED Lighting Effect
FN + Left / Right Arrow Keys =
Switching Lighting Effect Direction

IT

TASTIERA:

FN + E = Ripristina tutto al default
(Tenere premuto per 5 secondi per
ripristinare le impostazioni predefinite)

FN + F1 = Presa rapida / Ciclo a 8 Colori
FN + F2 = Livelli colore Rosso (0-5)
FN + F3 = Livelli colore Verde (0-5)
FN + F4 = Livelli colore Blue (0-5)

FN + F11 = Blocco tastiera completo

FN + Win = Blocco finestra

FN + PG UP/PG DN = Regola luminosità LED

FN + LED = Accendi/spegni illuminazione

LED = Modalità illuminazione a LED

FN + Up / Down Arrow Keys =
accelerare / rallentare gli effetti di
illuminazione a LED
FN + Left / Right Arrow Keys =
Cambiare effetto d'illuminazione

RU

Клавиатура:

FN + E = сбросить все
(Нажмите и удерживайте в течение 5 секунд для
установки параметров по умолчанию)

FN + F1 = Быстрый выбор / цикл 8 цветов
FN + F2 = Уровень красного цвета (0-5)
FN + F3 = Уровень зеленого цвета (0-5)
FN + F4 = Уровень синего цвета (0-5)

FN + F11 = блокировка всех клавиш

FN + Win = Блокировка клавиши Windows

FN + PG UP/PG DN =
Изменить яркость светодиодов

FN + LED = Включение и выключение подсветки

LED = Режим светодиодной подсветки

FN + Up / Down Arrow Keys =
ускорить/замедлить световые
эффекты LED

FN + Left / Right Arrow Keys =
переключение направления
светового эффекта

ID

KEYBOARD:

FN + E = Reset Semua ke Awal
(Tekan lalu Tahan selama 5 detik untuk
Mengatur Ulang ke Default)

FN + F1 = Pilihan Cepat / Perputaran 8 warna
FN + F2 = Tingkat Warna Merah (0-5)
FN + F3 = Tingkat Warna Hijau (0-5)
FN + F4 = Tingkat Warna Biru (0-5)

FN + F11 = Kunci Windows

FN + Win = Kunci Keyboard penuh

FN + PG UP/PG DN = Sesuaikan kecerahan led

FN + LED = Aktifkan/Nonaktifkan Pencahayaan

LED = Mode Perputaran Cahaya LED

FN + Up / Down Arrow Keys =
Percepat / Perlambat Efek Cahaya LED
FN + Left / Right Arrow Keys =
Mengganti Arah Cahaya LED

JP

キーボード:

FN + E = すべて初期値に戻す
(5 秒間押したままにすると、初期状態に
リセットされます)

FN + F1 = クイックピック/サイクル8色
FN + F2 = 赤色レベル (0-5)
FN + F3 = 緑の色レベル (0-5)
FN + F4 = 青色レベル (0-5)

FN + F11 = フルキーボードロック

FN + Win = Windowsロック

FN + PG UP/PG DN = LED の明るさを調整する

FN + LED = 照明をオン/オフに切り替える

LED = LED照明モードの循環

FN + Up / Down Arrow Keys =
LED照明効果の速度を上げる/下げる
FN + Left / Right Arrow Keys =
照明効果の方向を切り替える

FR

CLAVIER:

FN + E = Remettre tous les réglages par défaut
(Maintenez enfoncée pendant 5 secondes pour
réinitialiser aux valeurs par défaut)

FN + F1 = Sélection rapide / Cycle 8 couleurs
FN + F2 = Niveaux de couleur Rouge (0-5)
FN + F3 = Niveaux de couleur Verte (0-5)
FN + F4 = Niveaux de couleur Bleue (0-5)

FN + F11 = Verrouillage du clavier complet

FN + Win = Verrouillage Windows

FN + PG UP/PG DN = Régler la luminosité des LED

FN + LED = Allumer/éteindre l'éclairage

LED = Mode d'éclairage LED

FN + Up / Down Arrow Keys =
Accélérer / Ralentir les effets d'éclairage LED
FN + Left / Right Arrow Keys =
Changement de direction de l'effet d'éclairage

DE

TASTATUR:

FN + E = Alles auf Standardeinstellungen zurücksetzen
(Zum Rücksetzen auf den Standard 5 Sekunden
gedrückt halten)

FN + F1 = Schnellauswahl / Zyklus 8 Farben
FN + F2 = Farbstufen Rot (0-5)
FN + F3 = Farbstufen Grün (0-5)
FN + F4 = Farbstufen Blau (0-5)

FN + F11 = Vollständige Tastatursperre

FN + Win = Windows-Sperre

FN + PG UP/PG DN = LED-Helligkeit anpassen

FN + LED = Beleuchtung ein-/ausschalten

LED = LED Modus

FN + Up / Down Arrow Keys =
Schnelligkeit des Lichteffekts erhöhen / verringern
FN + Left / Right Arrow Keys =
Licht Effekt Richtungswechsel

PT

KEYBOARD:

FN + E = Redefine tudo para o defeito
(Mantenha pressionado durante 5 segundos para repor as predefinições de fábrica)

FN + F1 = Pick Rápido / Ciclo 8 cores
FN + F2 = Níveis da Cor Vermelha (0-5)
FN + F3 = Níveis da Cor Verde (0-5)
FN + F4 = Níveis da Cor Azul (0-5)

FN + F11 = Bloqueio total do teclado

FN + Win = Bloqueio do Windows

FN + PG UP/PG DN = Ajustar brilho de LED

FN + LED = Ligar/desligar a iluminação

LED = Modos de Iluminação LED

FN + Up / Down Arrow Keys =
Acelera / Desacelera os efeitos da iluminação LED
FN + Left / Right Arrow Keys =
Muda a direcção dos efeitos luminosos

CHS

鍵盤:

FN + E = 全部重置為默認值
(按住 5 秒以重置為默認值)

FN + F1 = 快速選擇/循環8種顏色
FN + F2 = 紅色水平(0-5)
FN + F3 = 綠色水平(0-5)
FN + F4 = 藍色水平(0-5)

FN + F11 = 完全鍵盤鎖定

FN + Win = Windows 鎖定

FN + PG UP/PG DN = 調整 LED 亮度

FN + LED = 開/關背光

LED = 循環 LED 照明模式

FN + Up / Down Arrow Keys =
增加/減小 燈光 流動速度
FN + Left / Right Arrow Keys =
切換照明效果方向

TR

KEYBOARD:

FN + E = Fabrika Ayarlarına Dön
(Varsayılan ayarlara dönmek için tuşa basarak 5 saniye basılı tutun)

FN + F1 = Hızlı seçim 8 Renk
FN + F2 = Kırmızı Renk Seviyesi (0-5)
FN + F3 = Yeşil Renk Seviyesi (0-5)
FN + F4 = Mavi Renk Seviyesi (0-5)

FN + F11 = Bütün klavye kilidi

FN + Win = Windows kilidi

FN + PG UP/PG DN = Led parlaklığını ayarla

FN + LED = Işığın Aç/Kapat

LED = Döngü LED Aydınlatma Modu

FN + Up / Down Arrow Keys =
Aydınlatma Etketini Hızlandır / Yavaşlat
FN + Left / Right Arrow Keys =
Aydınlatma Etketinin Yönünü Değiştir

AR

لوحة المفاتيح

E + FN = إعادة ضبط الكل للوضع الافتراضي
(اضغط مع الاستمرار لمدة 5 ثوان لإعادة تعيين كافة الإعدادات إلى القيم الافتراضية)

F1 + FN = اختبار سريع / دورة 8 ألوان
F2 + FN = مستوى اللون الأحمر (5-0)
F3 + FN = مستوى اللون الأخضر (5-0)
F4 + FN = مستوى اللون الأزرق (5-0)

F11 + FN = قفل لوحة المفاتيح بالكامل

Win + FN = قفل الويندوز

PG UP/PG DN + FN = تعديل مستوى سطوع LED

FN + LED = تشغيل/إيقاف الإضاءة

LED = وضع دورة إضاءة كاملة

FN + Up / Down Arrow Keys =
تسريع / إبطاء مؤثرات الإضاءة الخلفية
FN + Left / Right Arrow Keys + FN =
تغيير اتجاه مؤثرات الإضاءة

ES

TECLADO:

FN + E = Restablecer todo a los valores predeterminados
(Mantenga presionado durante 5 segundos para restablecer los ajuste por defecto)

FN + F1 = Selección rápida / ciclo 8 colores
FN + F2 = Niveles Color Rojo (0-5)
FN + F3 = Niveles Color Verde (0-5)
FN + F4 = Niveles Color Azul (0-5)

FN + F11 = Bloqueo total del teclado

FN + Win = Bloqueo de Windows

FN + PG UP/PG DN = Ajustar brillo de los LED

FN + LED = Encender y apagar la iluminación

LED = Modo Iluminación LED

FN + Up / Down Arrow Keys =
acelerar / ralentizar los efectos de iluminación LED
FN + Left / Right Arrow Keys =
Cambiar la dirección del efecto de iluminación

CHT

鍵盤:

FN + E = 全部恢復為預設值
(按住 5 秒以重設為預設值)

FN + F1 = 快速選擇/循環切換8種顏色
FN + F2 = 紅色色階(0-5)
FN + F3 = 綠色色階(0-5)
FN + F4 = 藍色色階(0-5)

FN + F11 = 全鍵盤鎖定

FN + Win = Windows 鎖定

FN + PG UP/PG DN = 調整 LED 亮度


FN + LED = 開啟/關閉背光

LED = 循環切換 LED 照明模式

FN + Up / Down Arrow Keys =
增加/減小 燈光流動速度

FN + Left / Right Arrow Keys =
切換照明效果方向

BUTTONS OVERVIEW

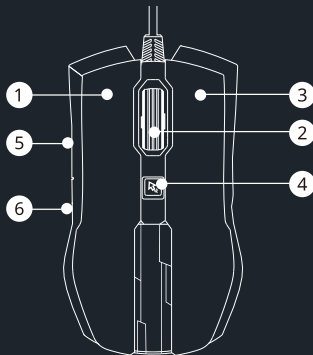

EN

- 1 Left Click
- 2 Wheel Button
- 3 Right Click
- 4 DPI Cycle Button
- 5 Forward Button
- 6 Backward Button
- 4 + 5 LED Lighting Color Change
- 4 + 6 LED Lighting Direction Change
- 2 + 4 LED Mode Change

ES

- | | | | | | |
|---|----------------|---|---------------------|-------|--|
| 1 | Clic Izquierdo | 4 | Ciclo de DPI | 2 + 5 | Cambio de color de iluminación de LED |
| 2 | Botón de rueda | 5 | Botón de avanzar | 4 + 6 | Cambio de la dirección de iluminación de LED |
| 3 | Clic Derecho | 6 | Botón de retroceder | 2 + 4 | Cambio de modo de LED |

IT

- | | | | | | |
|---|----------------|---|----------------|-------|--|
| 1 | Click Sinistro | 4 | Ciclo DPI | 2 + 5 | Cambio colore illuminazione a LED |
| 2 | Tasto Rotella | 5 | Tasto Avanti | 4 + 6 | Cambio di direzione dell'illuminazione a LED |
| 3 | Click Destro | 6 | Tasto Indietro | 2 + 4 | Cambio modalità LED |

FR

- | | | | | | |
|---|-------------|---|----------------|-------|--|
| 1 | Clic Gauche | 4 | Cycle DPI | 2 + 5 | Changement de couleur de l'éclairage LED |
| 2 | Molette | 5 | Bouton Avant | 4 + 6 | Changement de direction de l'éclairage LED |
| 3 | Clic Droit | 6 | Bouton Arrière | 2 + 4 | Changement de mode LED |

PT

- | | | | | | |
|---|----------------|---|----------------|-------|---|
| 1 | Click Esquerdo | 4 | Ciclo DPI | 2 + 5 | Mudança de cor da iluminação LED |
| 2 | Botão da Roda | 5 | Botão Frontal | 4 + 6 | Alterar a direção do efeito da iluminação LED |
| 3 | Click Direito | 6 | Botão Traseiro | 2 + 4 | Mudança de Modo LED |

DE

- | | | | | | |
|---|---------------|---|----------------------|-------|--------------------------------------|
| 1 | Linker Klick | 4 | DPI-Zyklus | 2 + 5 | Farbänderung der LED-Beleuchtung |
| 2 | Rad taste | 5 | Forward Seitentaste | 4 + 6 | Wechsel der LED-Beleuchtungsrichtung |
| 3 | Rechter Klick | 6 | Backward Seitentaste | 2 + 4 | LED-Modus ändern |

RU

- | | | | | | |
|---|----------------------------|---|------------------|-------|--|
| 1 | Щелчок левой кнопкой мыши | 4 | Кнопка цикла DPI | 2 + 5 | Смена цвета светодиодной подсветки |
| 2 | Кнопка колесика | 5 | Кнопка Вперед | 4 + 6 | Смена направления светодиодной подсветки |
| 3 | Щелчок правой кнопкой мыши | 6 | Кнопка Назад | 2 + 4 | Смена режима светодиодного |

ID

- | | | | | | |
|---|-------------|---|-------------------|-------|----------------------------|
| 1 | Klik Kiri | 4 | Tombo! Siklus DPI | 2 + 5 | Ganti Warna Cahaya LED |
| 2 | Tombo! Roda | 5 | Tombo! Maju | 4 + 6 | Ubah Arah Pencahaya!an LED |
| 3 | Klik Kanan | 6 | Tombo! Mundur | 2 + 4 | Ganti Mode LED |

TR

- | | | | | | |
|---|----------------|---|-------------------|-------|--------------------------------|
| 1 | Sol Tıklama | 4 | DPI Döngü Düğmesi | 2 + 5 | LED Aydınlatma Renk Değıştirme |
| 2 | Teker Düğmeler | 5 | İleri Butonu | 4 + 6 | LED Aydınlatma Yönünü Değıştir |
| 3 | Sağ Tıklama | 6 | Geri Butonu | 2 + 4 | LED Modu Değıştirme |

JP

- | | | | | | |
|---|---------|---|-------------|-------|-------------|
| 1 | 左クリック | 4 | DPI サイクルボタン | 2 + 5 | LED照明の色変更 |
| 2 | ホイールボタン | 5 | 進むボタン | 4 + 6 | LED 照明の方向変更 |
| 3 | 右クリック | 6 | 戻るボタン | 2 + 4 | LEDモードの変更 |

CHT

- | | | | | | |
|---|------|---|--------|-------|------------|
| 1 | 左鍵 | 4 | DPI 循環 | 2 + 5 | 燈效顏色切換 |
| 2 | 滾輪按鈕 | 5 | 往前鍵 | 4 + 6 | LED 燈光方向變更 |
| 3 | 右鍵 | 6 | 往後鍵 | 2 + 4 | 燈效模式切換 |

CHS

- | | | | | | |
|---|------|---|--------|-------|------------|
| 1 | 左鍵 | 4 | DPI 循环 | 2 + 5 | 灯效颜色切换 |
| 2 | 滚轮按钮 | 5 | 往前键 | 4 + 6 | LED 灯光方向变更 |
| 3 | 右键 | 6 | 往后键 | 2 + 4 | 灯效模式切换 |

AR

- | | | | | | |
|---|----------------------------|---|---------------------|-------|-----------------------|
| 1 | النقر على زر الفأرة الأيسر | 4 | DPI دائرة | 2 + 5 | تغيير ألوان الإضاءة |
| 2 | زر العجلة | 5 | مفتاح الذهاب للأمام | 4 + 6 | LED تغيير اتجاه إضاءة |
| 3 | النقر على زر الفأرة الأيمن | 6 | مفتاح الرجوع للخلف | 2 + 4 | تغيير وضعية الإضاءة |

設備名稱：電競鍵盤 型號（型式）：SGB-3000-KKMF4-TC						
單元	限用物質及其化學符號					
	鉛 (Pb)	汞 (Hg)	鎘 (Cd)	六價鉻 (Cr ⁶⁺)	多溴聯苯 (PBB)	多溴二苯醚 (PBDE)
金屬部件	—	○	○	○	○	○
外殼	○	○	○	○	○	○
電路板	—	○	○	○	○	○
連接線	○	○	○	○	○	○
備考1. “超出0.1 wt %”及“超出0.01 wt %”係指限用物質之百分比含量超出百分比含量基準值						
備考2. “○”係指該項限用物質之百分比含量未超出百分比含量基準值。						
備考3. “—”係指該項限用物質為排除項目。						

設備名稱：電競滑鼠 型號（型式）：SGB-3000-KKMF4-TC						
單元	限用物質及其化學符號					
	鉛 (Pb)	汞 (Hg)	鎘 (Cd)	六價鉻 (Cr ⁶⁺)	多溴聯苯 (PBB)	多溴二苯醚 (PBDE)
外殼	○	○	○	○	○	○
滾輪裝置	○	○	○	○	○	○
電路板	—	○	○	○	○	○
連接線	○	○	○	○	○	○
備考1. “超出0.1 wt %”及“超出0.01 wt %”係指限用物質之百分比含量超出百分比含量基準值						
備考2. “○”係指該項限用物質之百分比含量未超出百分比含量基準值。						
備考3. “—”係指該項限用物質為排除項目。						

部件名稱	有毒有害物質或元素					
	鉛 (Pb)	汞 (Hg)	鎘 (Cd)	六價鉻 (Cr(VI))	多溴聯苯 (PBB)	多溴二苯醚 (PBDE)
結構壳体	X	○	○	○	○	○
開關組件 PCB, USB	X	○	○	○	○	○
線 材	X	○	○	○	○	○
螺 絲	X	○	○	○	○	○
○：表示含有有毒有害物質在該部件所有可溶材料中的含量均在SJ/T11363-2006標準規定的限量要求以下。 X：表示含有有毒有害物質含量少於該標準的某一可溶材料中的含量超出SJ/T11363-2006標準規定的限量要求。 注：本產品RoHS的測試結果僅適用於該產品製造，含有有毒有害物質或元素的部件均須全球技術及發展水平 製成而完全沒有含有有毒有害物質或元素的替代。						

PACKAGE CONTENTS

- DEVASTATOR 3 RGB Keyboard
- DEVASTATOR 3 RGB Mouse
- Quick Start Guide



For more information, please visit
coolermaster.com/support

Asia Pacific - Cooler Master Technology Inc.
 7F., No. 398, Xinhui 1st Rd., Neihu Dist.,
 Taipei City 114065, Taiwan (R.O.C.)
 Tel: +886-2-2225-3517

Europe - Cooler Master Europe B.V.
 Lodewijkstraat 1b, 5652AC Eindhoven,
 The Netherlands
 Tel: +31-(0)40-702-0900

公司名稱：酷碼科技股份有限公司
 地址：臺北市內湖區新湖一路398號7樓
 電話：+886-2-2225-3517

China - Cooler Master China
 Room 112, Building 9, No. 327, Songjin Road,
 Jinshanwei Town, Jinshan Dist., Shanghai City, China
 Tel: +86-21-51872177

North America - Cooler Master NA
 1 N Indian Hill Blvd Suite D200
 Claremont, CA 91711 U.S.A.
 Tel: +1-888-624-5099

© 2022 Cooler Master Technology Inc. All Rights Reserved.
 All trademarks are registered to their respective owners.

512004693-GP Ver 4.0: 2022/05



Cooler Master Products

LIMITED WARRANTY

This document describes the warranty terms for all Cooler Master peripheral products

WHO THE WARRANTY PROTECTS:

This Warranty is valid to the original purchaser only.

WHAT THE WARRANTY PROTECTS:

This warranty is valid only for the Cooler Master Products distributed by authorized dealer(s).

Please contact Cooler Master for warranty information, services and questions:

<http://account.coolermaster.com>

WHAT IS AND IS NOT COVERED

It is important to note that our warranty is not an unconditional guarantee for the duration of the Program. Any replaced parts become the property of Cooler Master. The Program does not apply to the software component of a product or a product which has been damaged due to accident, misuse, abuse, improper installation, usage not in accordance with product specifications and instructions, natural or personal disaster, or unauthorized alterations, repairs or modifications.

The Program does also not cover any events such as below:

- Any damages unrelated to manufacturing defects.
- Any unsuitable environment or use of the product in Cooler Master Opinion.
- Any product which has been modified without official permission from Cooler Master, or on which the serial number or warranty sticker has been defaced, modified, or removed.
- Damage, deterioration or malfunction resulting from:
 - Accident, abuse, misuse, neglect, fire, water, lightning, or other acts of nature, commercial or industrial use, unauthorized product modification or failure to follow instructions included with the product.
 - Third party products using Cooler Master Components will not be covered by warranty. See your vendor or the manufacturer for information about servicing.
 - Repair or attempted repair by anyone not authorized by Cooler Master, Inc.
 - Any shipment damages (claims must be made with the carrier).
 - Unauthorized repairs to a Cooler Master product will void the warranty offered by the Program.
- Cooler Master reserves the right to refuse to service any product which has been altered, modified or repaired by non-Cooler Master Service personnel.
- Cooler Master does not warrant that this product will meet your requirements. It is your responsibility to determine the suitability of this product for your purpose.
- Removal or installation charges.
- You are responsible for the cost of shipping the product to Cooler Master. Cooler Master pays the cost of returning a product to You (applies only if product is directly purchased from Cooler Master).
- Cooler Master reserves the right to replace the product with a service product at their sole discretion at any time.
- Product malfunction or damage resulting from liquids or moisture.
- All accessories that malfunction due to physical damage such as: USB cables, extension cables, adapter cables, adapters, power cords, screws, retention brackets, ear cups, and all other similar accessories.

LIMITATION OF IMPLIED WARRANTIES:

THERE ARE NO WARRANTIES, EXPRESS OR IMPLIED, WHICH EXTEND BEYOND THE DESCRIPTION CONTAINED HEREIN INCLUDING THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

For the most updated information please visit our official website: www.coolermaster.com
Cooler Master Support: <https://account.coolermaster.com>

EXCLUSION OF DAMAGES

COOLER MASTER'S LIABILITY IS LIMITED TO THE COST OF REPAIR OR REPLACEMENT OF THE PRODUCT. COOLER MASTER SHALL NOT BE LIABLE FOR:

- DAMAGE TO OTHER PROPERTY CAUSED BY ANY DEFECT IN THE PRODUCT, DAMAGES BASED UPON INCONVENIENCE, LOSS OF USE OF THE PRODUCT, LOSS OF TIME, LOSS OF PROFITS, LOSS OF BUSINESS OPPORTUNITY, LOSS OF GOODWILL, INTERFERENCE WITH BUSINESS RELATIONSHIPS OR OTHER COMMERCIAL LOSS, EVEN IF ADVISED OF THEIR POSSIBILITY OF SUCH DAMAGES.
- ANY OTHER DAMAGES, WHETHER INCIDENTAL, CONSEQUENTIAL OR OTHERWISE
- ANY CLAIM AGAINST THE CUSTOMER BY ANY OTHER PARTY

WARRANTY INFORMATION:

If the product is found with reasonable defect within the period of (refer to Table A.,) starting on the first day of purchase (with proof of invoice), this is what you must do, to claim warranty.

PROCEDURES:

1. Consumers should return to the shop where he/she has bought the goods, After confirming with the shop with a valid invoice, they may approach the distributor for RMA claim.
2. After confirmed by the distributor that the goods was damaged due to natural causes, replacement and repair will be done by distributor (including brand new or refurbished goods)
3. All faulty goods must return to the distributor, expenses for returning the faulty goods will be covered by the consumer, and distributor will cover the cost involved in the transporting of parts or repaired goods to the consumer.

Regarding all the expenses incurred in making the claim, and this is how you would claim:

1. Within the valid warranty date, starting from the first day of issuing invoice, Retail shops will assist in confirmation with distributor for the consumer for the following.
 - A. If the damage was caused by the consumer, then the consumer should cover all expenses in fixing the product, if the product still can't be fixed, we would suggest consumer in buying a brand new product.
 - B. Product defect caused under natural use, expenses will be covered by the distributor.
2. Faulty products with expired warranty dates, we would suggest consumer to purchase a new products, without undergoing for repairs.

Table A:

Cooler Master Products

Please check your user manual for the exact warranty period terms for products that are not shown below. For more warranty information, please visit our official website:

<http://www.coolermaster.com/service/warranty.html>

Cooler Master Gaming Peripherals products warranty

Product Name	Warranty Term
DEVASTATOR 3 RGB	2 years

FOR AUSTRALIA ONLY:

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. (Cooler Master Technology Inc., 7F, No. 398, Xinhui 1st Rd., Neihu Dist., Taipei City 114065, Taiwan (R.O.C.)
Telephone: +886-2-2225-3517 (standard international call charges apply.)