




HYPER 212 LED TURBO

USER MANUAL


01. Package Content

A

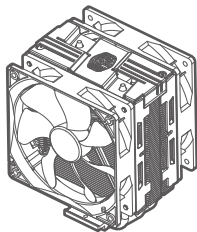


x1

B

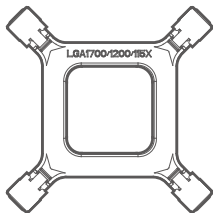


x1

C

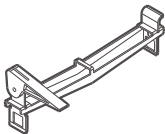


x1

D

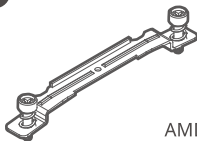

AMD
x2

E

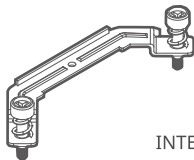

INTEL
x2

F



 
x2

G




x1

H




x1



02. Intel & AMD

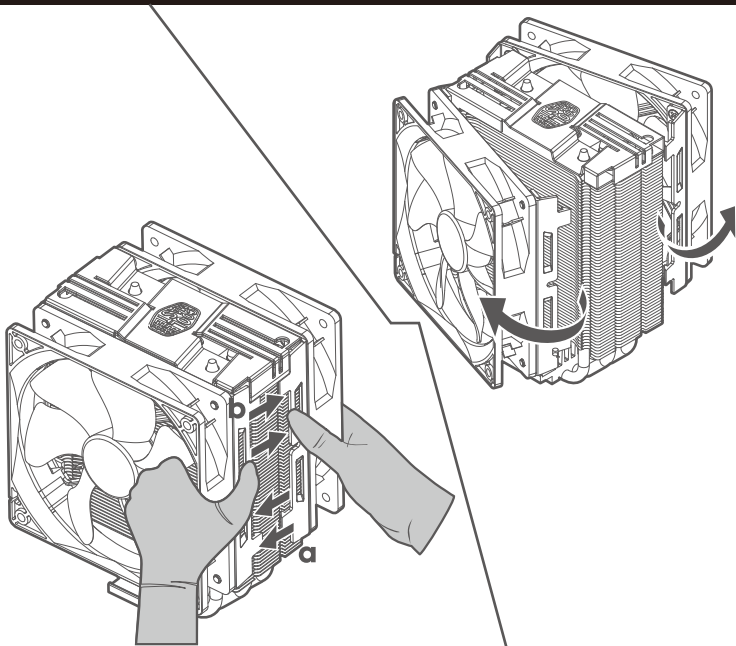


03. Intel & AMD

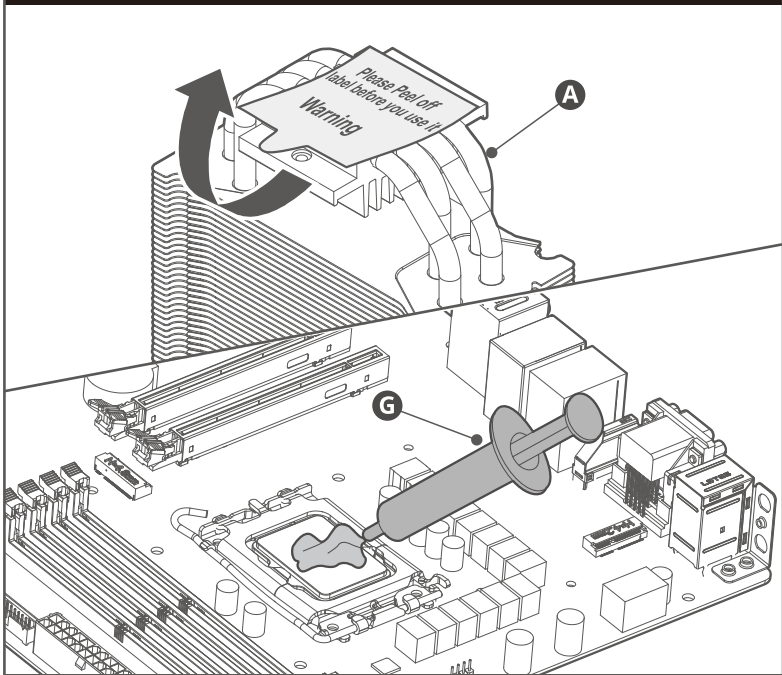


04-1. AMD - AM5 / AM4

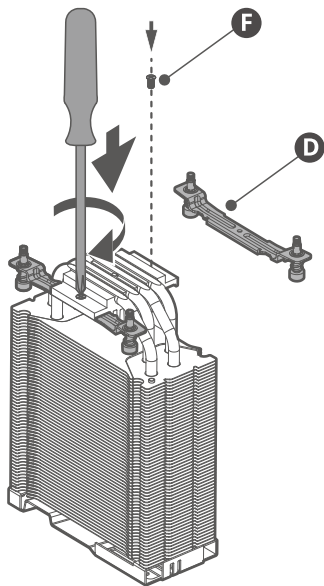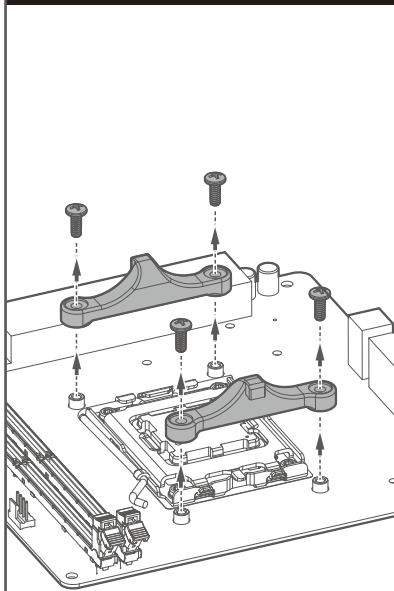


04-2. AMD - AM5 / AM4

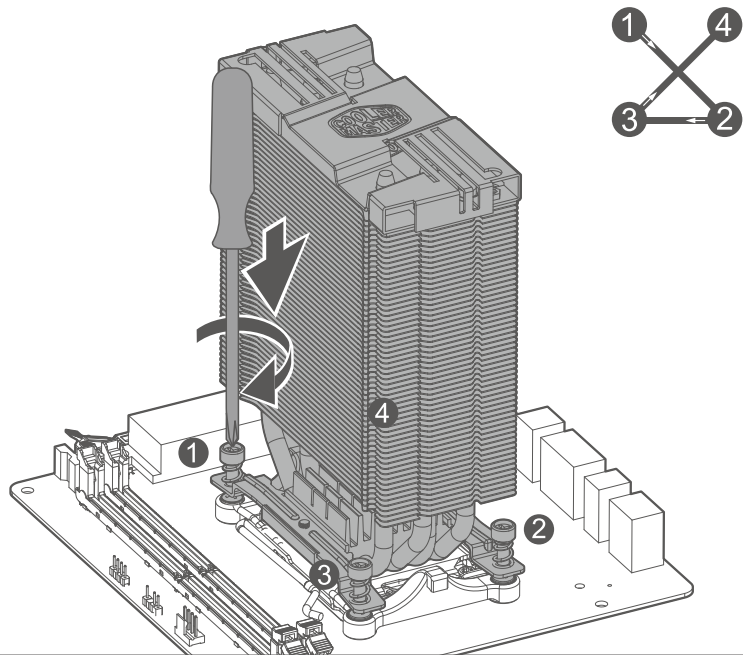


05-1. AMD - AM5 / AM4

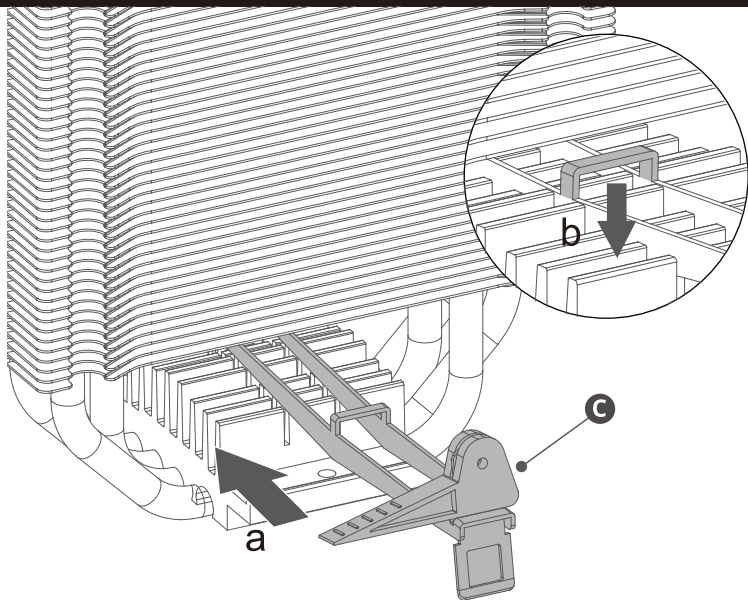





05-2. AMD - AM5 / AM4

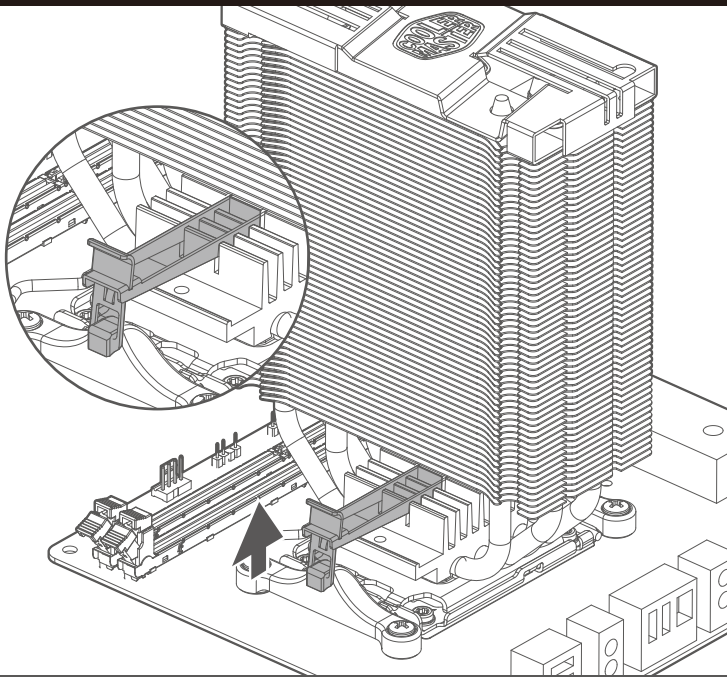


05-3. AMD - AM5 / AM4

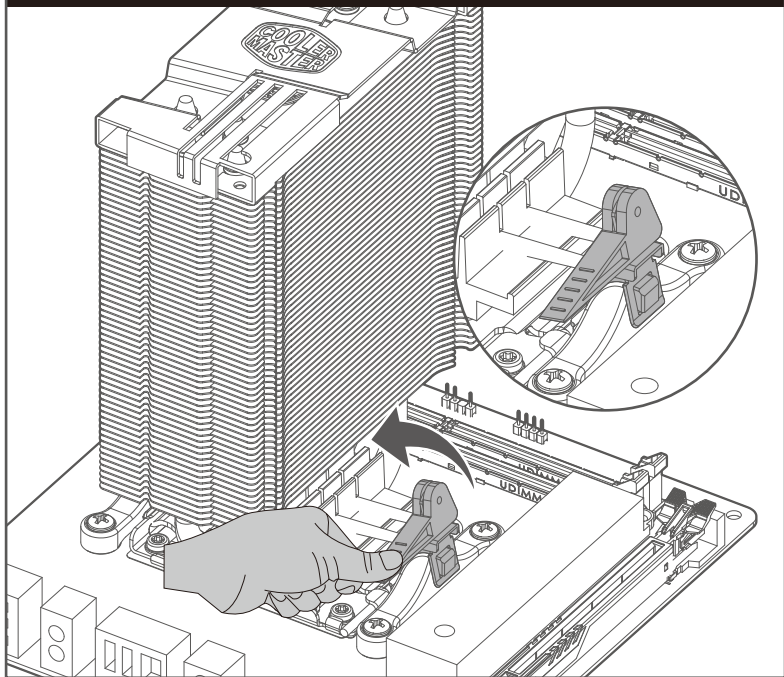


06-1. Intel - LGA 1700 / 1200 / 115X

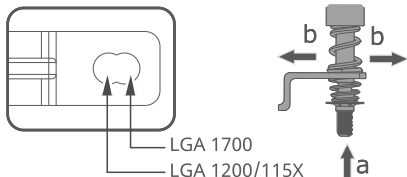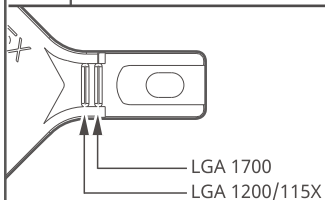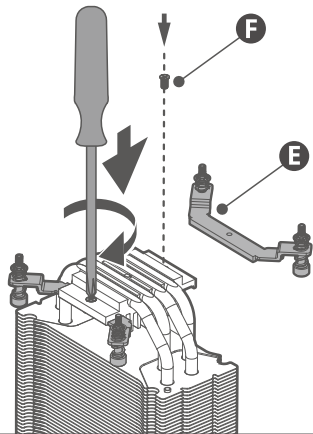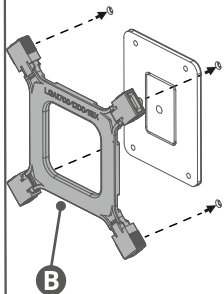


06-2. Intel - LGA 1700 / 1200 / 115X

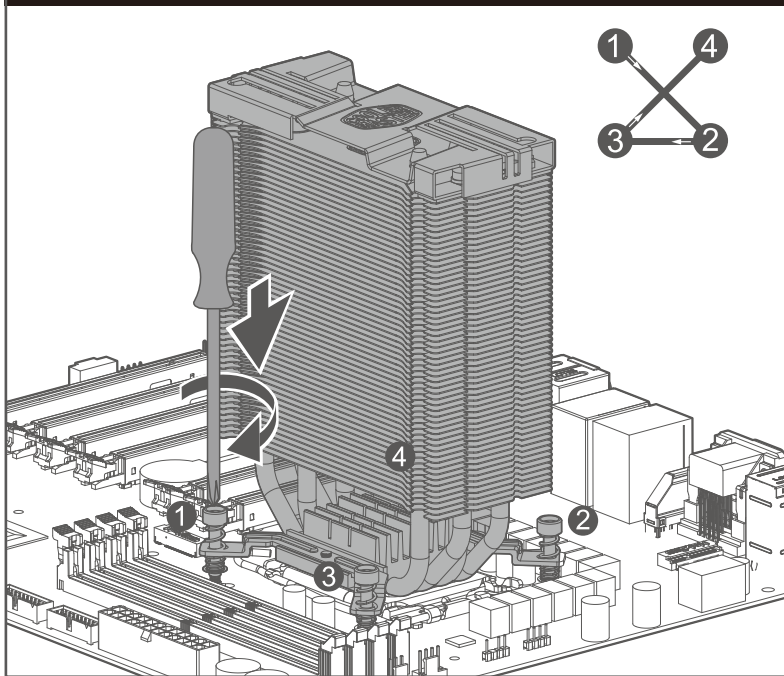

07. Intel & AMD

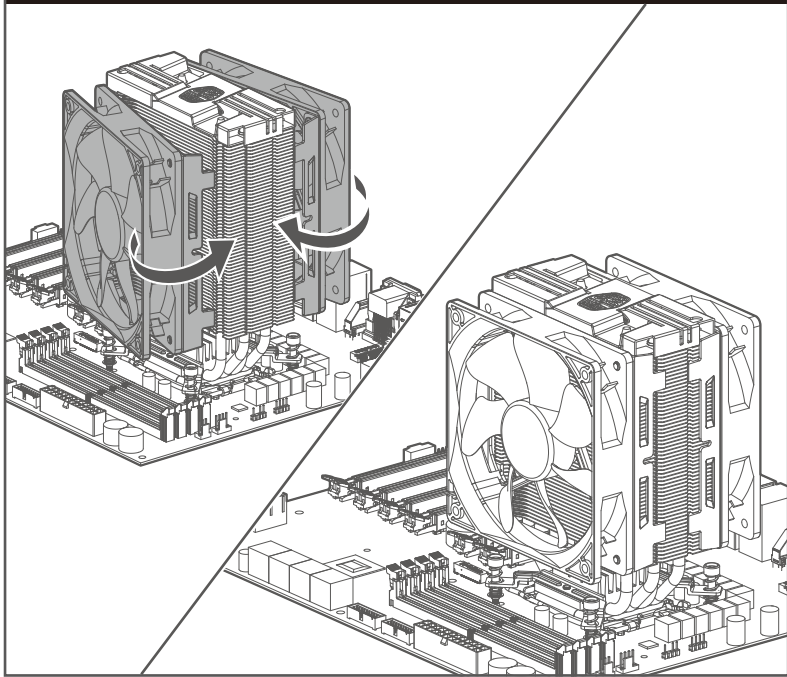

08. Intel & AMD

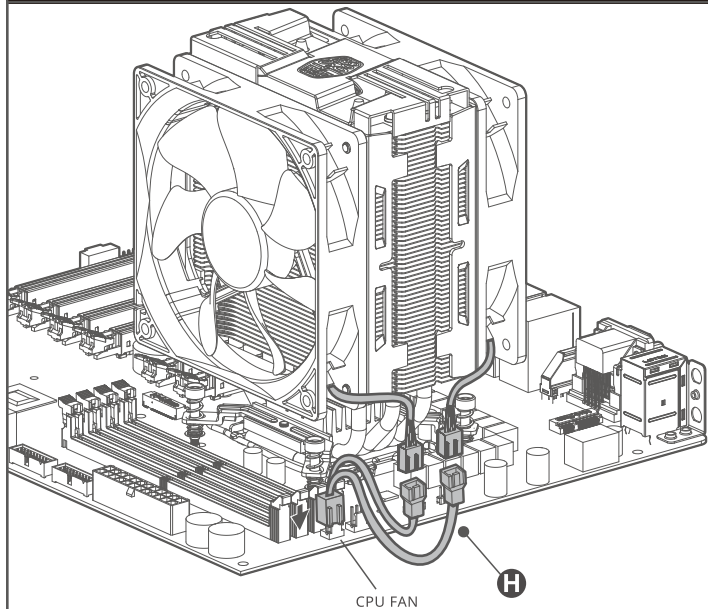

Please visit our website at www.coolermaster.com

China - Cooler Master China

Room 112, Building 9, No. 327, Songjin Road, Jinshanwei Town,
Jinshan Dist., Shanghai City, China

Tel: +86-21-51872177

Europe - Cooler Master Europe B.V.

Lodewijkstraat 1b, 5652AC Eindhoven, The Netherlands

Tel: +31- (0)40-702-0900

North America - CMI USA, Inc.

1 N Indian Hill Blvd Suite 200, Claremont, CA 91711, USA

Tel: +1-888-624-5099

For the most updated information, please visit our official website: www.coolermaster.com
Cooler Master Support: <https://account.coolermaster.com/>



512005480-GP Ver 1.0:2022/09

©2022 Cooler Master Technology Inc. All Rights Reserved. All trademarks are registered to their respective owners.