



IMPORTANTE

Antes de utilizar el producto, lea cuidadosamente este instructivo para evitar cualquier mal funcionamiento. La información presentada sirve únicamente como referencia sobre el producto. Debido a actualizaciones pueden existir diferencias. Consulte nuestra página web www.steren.com para obtener la versión más reciente de este manual.

- Este producto NO es un juguete; si es utilizado por niños, es necesaria la supervisión de un adulto.
- Cualquier reparación no autorizada puede ocasionar mal funcionamiento y anulará la garantía.

“La operación de este equipo está sujeta a las siguientes dos condiciones: (1) es posible que este equipo o dispositivo no cause interferencia perjudicial y (2) este equipo o dispositivo debe aceptar cualquier interferencia, incluyendo la que pueda causar su operación no deseada”.

- PARTES**
- Cambio de modo
 - Volumen-/Pista anterior
 - Botón multifunción
 - Volumen+/Pista siguiente
 - Entrada de alimentación Mini USB/Auxiliar
 - Entrada 3,5 mm para audífonos
 - Puerto USB
 - Ranura para tarjeta micro SD
 - Interruptor de encendido/apagado

CARGAR LA BATERÍA

Antes del primer uso, cargue la batería durante 3 horas continuas.

MODO BLUETOOTH

1 Encienda la bocina

2 Active el Bluetooth en su dispositivo y seleccione **STEREN BOC-830**

3 Inicie la reproducción de audio desde su dispositivo móvil

- REPRODUCCIÓN DE MÚSICA**
- Sólo para los modos Bluetooth, USB y tarjeta micro SD
- Opción 1**
- Presione 1 vez
 - Presione 2 veces seguidas
 - Presione 1 vez
 - Mantenga presionado
 - Mantenga presionado
- Opción 2**

MODO USB/MICRO SD

Inserte una memoria USB/micro SD con archivos de audio en el puerto correspondiente. **La reproducción será automática.**

MODO AUXILIAR

En este modo sólo están disponibles los controles de volumen

MODO RADIO FM

El multicable actúa como antena; conéctelo a el puerto miniUSB para tener mejor recepción.

- Presione hasta escuchar el mensaje “FM radio mode”
- Presione una vez para iniciar la búsqueda automática de estaciones.
- Cambie de estación y controle el nivel de volumen

ESPECIFICACIONES

Alimentación: 5 V 500mA (x USB)

Potencia: 2 Wrms

Repuesta en frecuencia: 120 Hz - 20 kHz

Sensibilidad: 95dB \pm 2dB

Batería: 3,7 V

Las especificaciones pueden cambiar sin previo aviso






IMPORTANT
 Before to use the product, please read carefully this manual to avoid any malfunction. The info in this manual is shown as reference. Due to updates can exist differences. Consult our website www.stern.com to obtain the most actual version of this manual.

- This product is NOT a toy; keep it away from children.
- Any reparation not authorized may cause malfunction and avoid the warranty.

"The operation of this equipment is subject to the following two conditions: (1) it is possible that this equipment or device may not cause harmful interference and (2) this equipment or device must accept any interference, including interference that may cause its undesired operation".

- PARTS**
- Mode
 - Volume-/Backward
 - Multifunction button
 - Volume+/Forward
 - Mini USB power input/Auxiliary
 - 3.5 mm earphones input
 - USB port
 - micro SD card slot
 - On/Off switch

CHARGE THE BATTERY
 Before to first use, charge the battery for 3 continuous hours

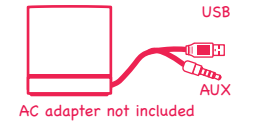


BLUETOOTH MODE

- Turn on the speaker
- Activate the Bluetooth in your mobile device and select **STEREN BOC-830**
- Start the playback music from your device


PLAYBACK MUSIC
 Only for Bluetooth, USB and Micro SD card modes

- Option 1: Press once [Play/Pause]
- Option 2: Press twice in a row [Previous]
- Press once [Next]
- Press and hold [Previous]
- Press and hold [Next]

USB/MICRO SD MODE
 Insert an USB/micro SD card memory with audio files into the corresponding port. **The playback is automatically**

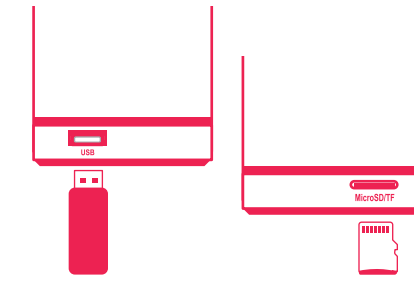

AUXILIARY MODE
 In this mode, only the volume controls are available

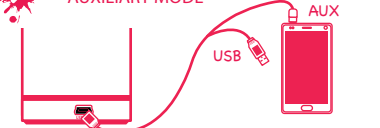

RADIO FM MODE
 The multicable acts as an antenna; Connect it to the miniUSB port for better reception.

- Press until you can hear the "FM radio mode" message
- Press once to start the automatic search of stations
- Change the station and control the volume level

- SPECIFICATIONS**
- Input: 5V --- 500mAh (x USB)
 - Power: 2 Wrms
 - Frequency Response: 120 Hz - 20 kHz
 - Sensitivity: 95dB ± 2dB
 - Battery: 3.7 V ---

Specifications may change without notice

