


Motherboard

TUF GAMING X570-PRO (WI-FI)

Quick start guide	Hurtigstartsveiledning
Кратко упу̀тване за бърз старт	Guia de consulta rápida
Stručná příručka	Instrukcja szybkiej instalacji
Quick Start-vejledning	Краткое руководство
Snelstartgids	Ghid de pornire rapidă
Lühijuhend	Guía de inicio rápida
Guide de démarrage rapide	Vodič za brzo korišćenje
Pikakäynnistysopas	Stručný návod na spustenie
Schnellstartanleitung	Snabbstartsguide
Οδηγός γρήγορης έναρξης	คู่มือเริ่มต้นอย่างเร็ว
Beüzemelési útmutató	Hızlı Başlatma Kılavuzu
Guida Rapida	Hồðung daðn khòui òaõng nhanh
Panduan Ringkas	Vodič za brzi početak rada
クイックスタートガイド	Стисле керівництво для початку експлуатації
Жылдам іске қосу нұсқаулығы	Vodnik za hitri začetek
빠른 시작 설명서	دليل التشغيل السريع
Greitos darbo pradžios vadovas	راهنمای شروع سریع
Īsa pamācība	

Motherboard Layout

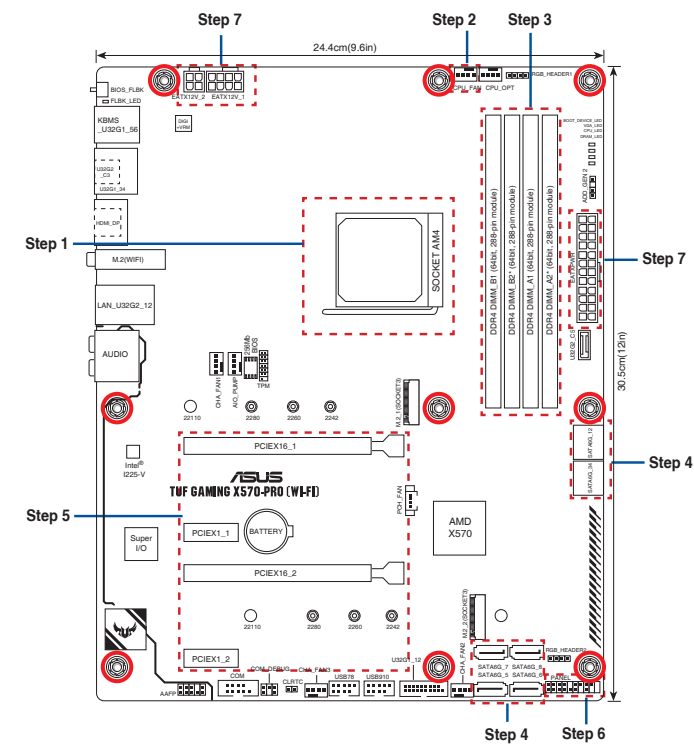

Australia statement notice

From 1 January 2012 updated warranties apply to all ASUS products, consistent with the Australian Consumer Law. For the latest product warranty details please visit <http://www.asus.com/support/>. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

If you require assistance please call ASUS Customer Service 1300 2787 88 or visit us at <http://www.asus.com/support/>

India E-waste (Management) Rule 2016

This product complies with the "India E-Waste (Management) Rules, 2016" and prohibits use of lead, mercury, hexavalent chromium, polybrominated biphenyls (PBBs) and polybrominated diphenyl ethers (PBDEs) in concentrations exceeding 0.1% by weight in homogenous materials and 0.01 % by weight in homogenous materials for cadmium, except for the exemptions listed in Schedule II of the Rule.

Regional notice for Turkey

AEEE Yönetmeliğine Uygundur.


Q16844
First Edition
July 2020
Copyright © ASUSTeK Computer Inc.
All Rights Reserved

PRODUCED NO
PÓLO INDUSTRIAL
DE MANAUS






Step 1

Install the CPU
Инсталирайте процесора
Instalace procesoru
Installer CPU'en
De CPU installeren
Paigaldage CPU
Installer le CPU
Asenna suoritin
Installieren der CPU
Εγκατάσταση της CPU
Helyezze be a CPU-t
Installare la CPU
Pasang CPU
CPUを取り付ける
CPU орнатыңыз
CPU 설치
Sumontuokite centrinį procesorių
Uzstādiet centrālo procesoru

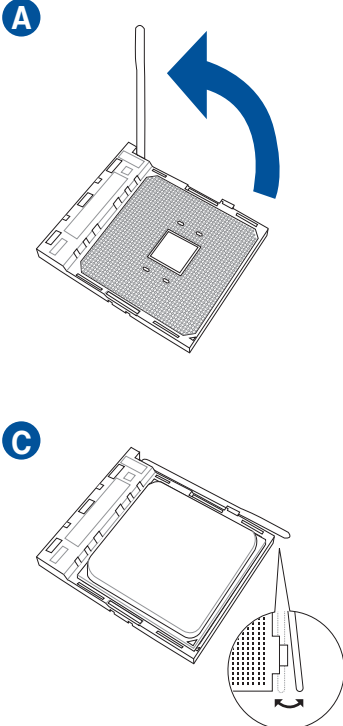


Installer sentralprosessoren (CPU)
Instale a CPU
Instalacja procesora
Установка процессора
Instalați CPU-ul
Instalar la CPU
Instalirajte CPU
Instalácia centrálneho procesora
Installera CPU
ติดตั้ง CPU
CPU'yu takin
Láp CPU
Instalacija procesora
Інстальуйте процесор
Namestitev CPE-ja
(CPU) قم بتثبيت وحدة المعالجة المركزية
CPU را نصب کنید

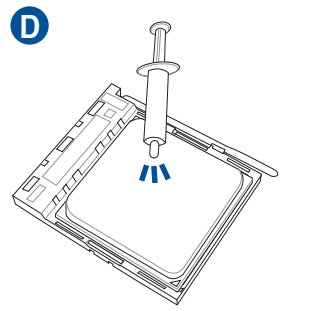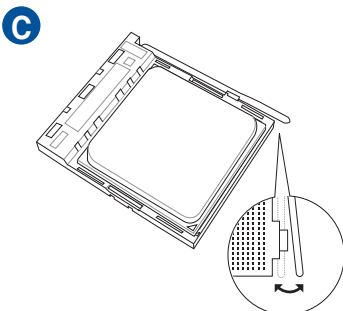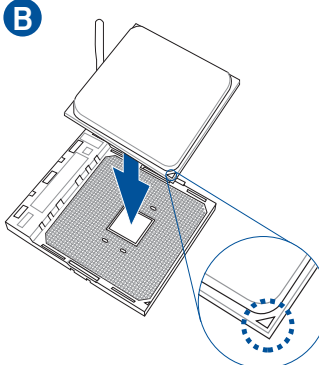


Step 2

Install the CPU fan
Инсталирайте вентилатора на процесора
Instalace ventilátoru procesoru
Installer CPU-blæseren
De CPU-ventilator installeren
Paigaldage CPU ventilator
Installer le ventilateur de CPU
Asenna suorittimen tuuletin
Installieren des CPU-Lüfters
Εγκατάσταση του ανεμιστήρα της CPU
Szerelje be a CPU ventilátort
Installare la ventola della CPU
Pasang kipas CPU
CPUクーラーを取り付ける
CPU желдеткішін орнатыңыз
CPU 팬 설치
Sumontuokite centrinio procesoriaus ventiliatorių
Uzstādiet centrālā procesora ventilatoru
Installer CPU-viften
Instale a ventoinha de CPU
Instalacja wentylatora procesora
Установка вентилятора
Instalați ventilatorul CPU-ului
Instalar el ventilador de la CPU
Instalirajte CPU ventilator
Instalácia ventilátora centrálneho procesora
Installera CPU-fläkten
ติดตั้งพัดลม CPU
CPU fanını takın
Lắp quạt CPU
Instalacija ventilatora procesora
Інстальуйте вентилятор процесора
Namestitev ventilatorja CPE-ja

Type 1

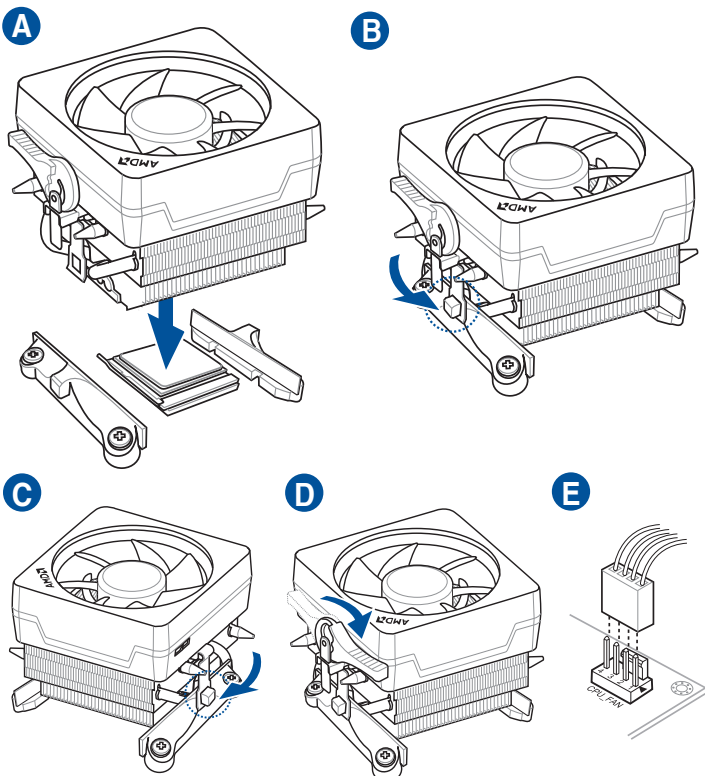


Type 2

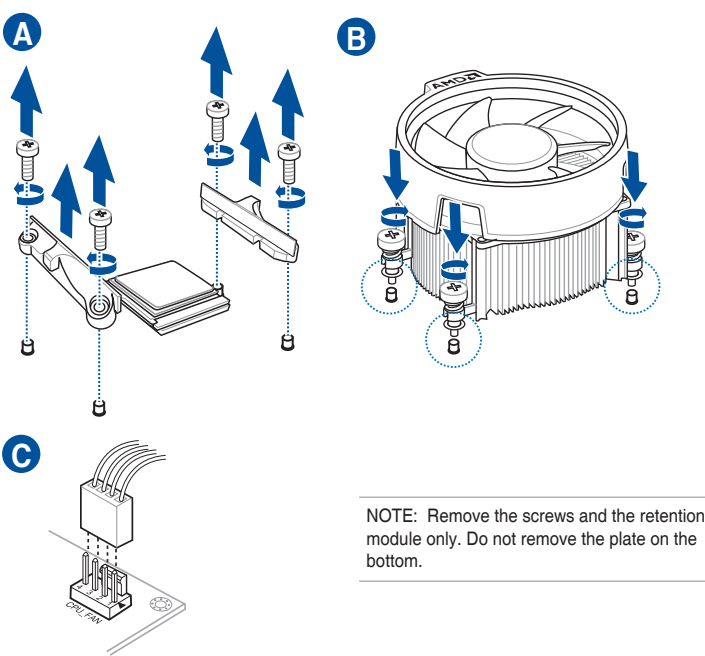

NOTE: Remove the screws and the retention module only. Do not remove the plate on the bottom.

Step 3

Install memory modules
Инсталирайте модулите памет
Instalace paměťových modulů
Installer hukommelsesmodulerne
Geheugenmodules installeren
Paigaldage mäluoodulid
Installer les modules mémoire
Asenna muistimoduulit
Installieren der Speichermodule
Εγκατάσταση των στοιχείων μνήμης
Helyezze be a memória modulokat
Installare i moduli di memoria
Pasang modul memori
メモリーモジュールを取り付ける
Жад модульдерін орнатыңыз
메모리 모듈 설치
Sumontuokite atminties modulius
Uzstādiet atmiņas modulus

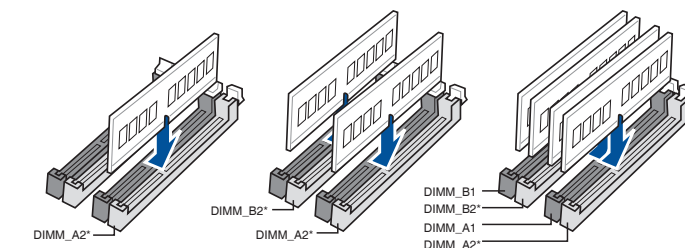

Installer minnmoduler
Instale módulos de memória
Instalacja modułów pamięci
Установка модулей памяти
Instalați modulele de memorie
Instalar los módulos de memoria
Instalirajte module memorije
Instalácia pamäťových modulov
Installera minnesmoduler
ติดตั้งโมดูลหน่วยความจำ
Bellek modüllerini takın
Lắp các thanh nhớ
Instalacija memorijskih modula
Інстальуйте модулі пам'яті
Namestitev pomnilniških modulov


تثبيت وحدات الذاكرة
مادل های حافظه را نصب کنید

Step 4

Install storage devices
Инсталиране на устройства за съхранение
Instalování paměťových zařízení
Installering af lagerenheder
Opslagapparaten installeren
Installage salvetid
Installer les périphériques de stockage
Tallennuslaitteiden asentaminen
Installieren der Speichergeräte
Εγκατάσταση συσκευών αποθήκευσης
Tárolóeszközök telepítése
Installare i dispositivi di archiviazione
Memasang perangkat penyimpanan
ストレージデバイスを取り付ける
Сақтау құрылғыларын орнату
저장 장치 설치
Įdiegti saugojimo įrenginius
Instalējiet atmiņas ierices


Montere lagringsenheter
Instalar dispositivos de armazenamento
Instalacja urządzeń pamięci
Установите накопители
Instalarea dispozitivelor de stocare
Instalar dispositivos de armazenamento
Instalirajte uređaje za skladištenje
Ištalácia pamäťových zariadení
Installera lagringsenheter
การติดตั้งอุปกรณ์เก็บข้อมูล
Depolama aygıtlarınızı takma
lắp đặt các thiết bị lưu trữ
Instalirajte uređaje za pohranjivanje
Інсталяція пристроїв пам'яті
Namestitev naprav za shranjevanje

تثبيت أجهزة التخزين
نصب دستگاه های ذخیره سازی

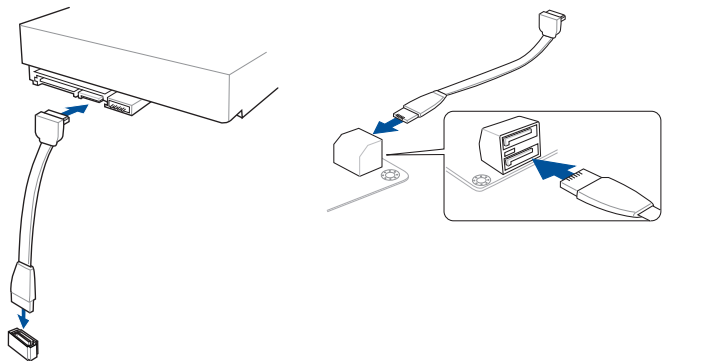


Step 5

- Install expansion card(s)
- Инсталируйте допълнителна карта (допълнителни карти)
- Instalace přídatné karty (karet)
- Installer udvidelseskortene
- Uitbreidingskaart(en) installeren
- Paigaldage laienduskaart(-kaardid)
- Installer une carte d'extension
- Asenna laajennuskortti/kortit
- Installieren der Erweiterungskarte(n)
- Εγκατάσταση καρτών επέκτασης
- Helyezze be a bővítkártyá(ka)t
- Installare le schede di espansione
- Pasang kartu ekspansi
- 拡張カードを取り付ける
- Кеңейту картас(лар)ын орнатыңыз
- 확장 카드 설치
- Sumontuokite išplėtimo plokštę (-es)
- Uzstādiet izvērses karti(-es)
- Installer utvidelseskort
- Instale placas de expansão
- Instalacja kart(y) rozszerzenia
- Установка карт расширения
- Instalați cardul/cardurile de extensie
- Instalar tarjetas de expansión
- Instalirajte ekspanzionu/e karticu/e
- Instalácia rozširujúcich kariet
- Installera expansionskort
- ติดตั้งเอ็กซ์เพนชันการ์ด
- Genişletme kartlarını takın
- Lắp (các) thẻ mở rộng
- Instalacija kartica za proširenje
- Інсталюйте плати розширення
- Namestitev razširitvenih kartic

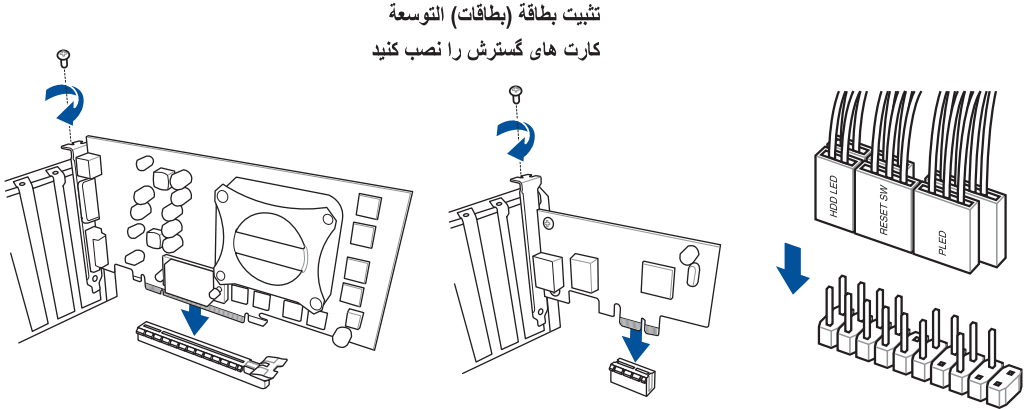


Step 8

- Connect input/output devices
- Свързване на I/O устройства
- Připojení vstupních/výstupních zařízení
- Tilslut input-/outputudstyr
- I/O-apparaten aansluiten
- Ühendage sisend-/väljundseadmed
- Connecter les périphériques d'entrée/sortie
- Liitä tulo/lähtölaitteita
- Eingabe-/Ausgabe-Geräte verbinden
- Σύνδεση συσκευών εισόδου/εξόδου
- Bemeneti/kimeneti eszközök csatlakoztatása
- Collegate i dispositivi di input/output
- Sambungkan perangkat input/output
- 入出力デバイスに接続する
- Кіріс/шығыс құрылғыларын қосу
- 일렉/출력 장치 연결
- Prijuvite įvesties / išvesties įrenginius
- Pievienot ievades/izvades ierīces

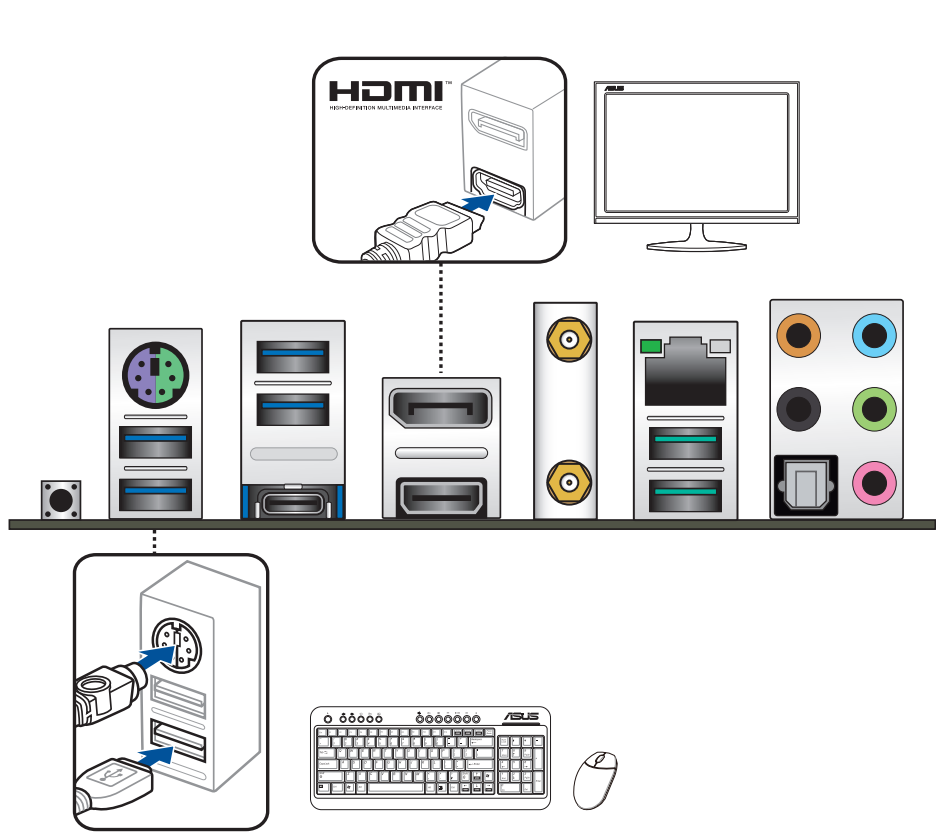


Step 6

- Install the system panel connector
- Инсталируйте конектора за системния панел
- Nainstaluje konektor pro panel systému
- Tilslut stikket til systempanelet
- Installeer de connectors van het systeempaneel
- Ühendage süsteemi paneeli liitmik
- Installer le connecteur de panneau système
- Asenna järjestelmäpaneelin liitäntä
- Installieren des Systembereich-Anschlusses
- Εγκατάσταση του συνδέσμου του πινάκα του συστήματος
- Telepítse a rendszerpanell csatlakozót
- Installa il connettore del pannello di sistema
- Pasang konektor panel sistem
- システムパネルコネクタを取り付ける
- Жүйе панелінің коннекторын орнатыңыз
- 시스템 패널 커넥터를 설치하십시오
- Sumontuokite sistemos valdymo plokštės jungtį
- Sistēmas paneļa savienotāja instalēšana
- Installer systempanelkontakten
- Instalar o conector do painel do sistema
- Zainstaluj złącze panelu systemowego
- Установка разъема системной панели
- Instalați Conector pentru placa de bază
- Instalar el conector del panel del sistema
- Instalirajte priključak za sistemsku ploču
- Instalácia konektora systémového panela
- Sätt i systempanelens kontakt
- ติดตั้งขั้วต่อแผงระบบ
- Sistem paneli konnektörünü takın
- Lắp đầu nối bảng điều khiển hệ thống
- Instalacija konektora ploče sustava
- Встановіть з'єднувач системної панелі
- Namestitev Konektor matične plošče

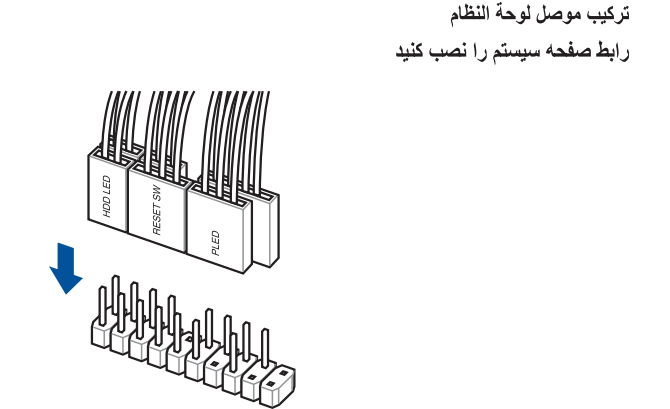

Step 9

- Power on the system and install operating system and drivers
- Включете системата и инсталирайте операционната система и драйверите
- Zapnutí napájení systému a instalace operačního systému a ovladačů
- Tænd for systemet, og installer operativsystemet og de tilhørende drivere
- Het systeem inschakelen en het besturingssysteem en de stuurprogramma's installeren
- Lülitage süsteemi toide sisse ning installige operatsioonisüsteem ja draiverid
- Allumer le système et installer le système d'exploitation et les pilotes
- Käynnistä järjestelmä ja asenna käyttöjärjestelmä ja ohjaimet
- Einschalten des Systems und Installieren des Betriebssystems und der Treiber
- Ενεργοποιήστε το σύστημα και εγκαταστήστε το λειτουργικό σύστημα και τα προγράμματα οδήγησης
- Kapcsolja be a rendszert és telepítse az operációs rendszert és illesztőprogramokat
- Accendere il sistema e installare il sistema operativo e i driver
- Hidupkan sistem, lalu instal sistem operasi dan driver
- システムを起動しOSとドライバーをインストールする
- Жүйені қосып, операциялық жүйені және драйверлерді орнатыңыз
- 시스템 전원 켜기 및 운영체제와 드라이버 설치
- Ijunkite sistemą ir įdiekite operacinę sistemą ir tvarkykles
- Ieslēdziet sistēmu un instalējiet operētājsistēmu un draiverus
- Slå på systemet og installer operativsystem og drivere
- Ligue o sistema e instale o sistema operativo e os controladores
- Włącz zasilanie i zainstaluj system operacyjny oraz sterowniki
- Включение системы и установка операционной системы и драйверов
- Porniți sistemul și instalați sistemul de operare și driverele
- Proporcionar alimentación al sistema e instalar el sistema operativo y los controladores
- Uključite sistem i instalirajte operativni sistem i draivere
- Zapnutie systému a inštalácia operačného systému a ovládačov
- Slå på systemet och installera operativsystem och drivrutiner
- เปิดระบบ และติดตั้งระบบปฏิบัติการและไดรเวอร์
- Sistemi açip işletim sistemini ve sürücülerini yükleyin
- Bật nguồn hệ thống và cài đặt hệ điều hành cũng như các driver
- Uključivanje sustava i instaliranje operativnih sustava i upravljačkih programa
- Увімкніть живлення системи та інсталюйте операційну систему та драйвери
- Vklop sistema ter namestitev operacijskega sistema in gonilnikov

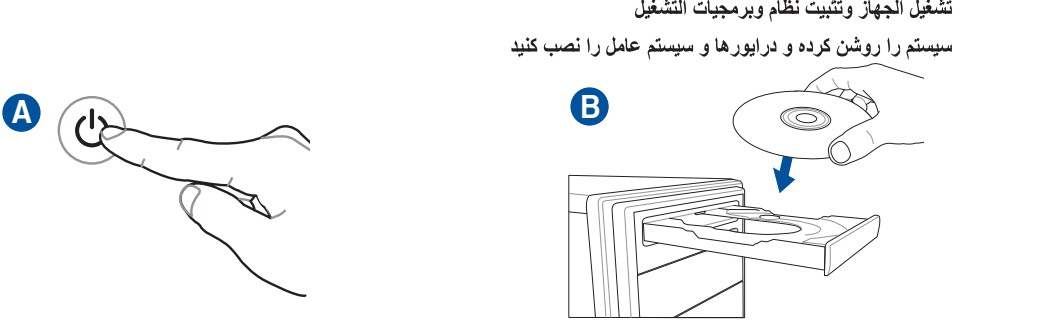

Step 7

- Install ATX power connectors
- Инсталирайте ATX конекторите за хранване
- Instalace konektorů napájení ATX
- Installer ATX-strømtilslutningerne
- ATX-voedingsaansluitingen installeren
- Paigaldage ATX-i toitekonektorid
- Installer les connecteurs d'alimentation ATX
- Asenna ATX-virtaliittimet
- Installieren der ATX-Stromanschlüsse
- Εγκατάσταση συνδέσμων τροφοδοσίας ATX
- Csatlakoztassa az ATX tápcsatlakozókat
- Installare i connettori di alimentazione ATX
- Pasang konektor daya ATX
- 電源ケーブルを接続する
- АТХ электр қуат қосқыштарын орнатыңыз
- АТХ 전원 커넥터 설치
- Sumontuokite ATX maitinimo jungtis
- Uzstādiet ATX strāvas savienotājus
- Installer kontakter for ATX-strøm
- Instale os conectores de alimentação ATX
- Instalacja złączy zasilacza ATX
- Установка АТХ разъема
- Instalați pinii conectori ATX
- Instalar conectores de alimentación ATX
- Instalirajte ATX električne priključke
- Instalácia napájacích konektorov ATX
- Installera ATX strömkontakter
- ติดตั้งขั้วต่อ ATX เพาเวอร์
- АТХ güç konnektörlerini takın
- Lắp các đầu nối nguồn ATX
- Instalacija konektora ATX napajanja
- Інсталюйте розніми живлення ATX
- Namestitev priključkov za napajanje ATX

